

## DISASSEMBLY

### 1. REMOVE EVAPORATOR


- (a) Disconnect the connector clamp.
- (b) Remove the 8 screws and No. 1 cooler cover.
- (c) Pull out the evaporator

#### HINT:


At the time of reassembly, please refer to the following item.  
If evaporator is replaced, add compressor oil to the evaporator.

**Add: 40 cc (1.4 fl.oz.)**

**Compressor oil: ND-OIL 8 or equivalent**

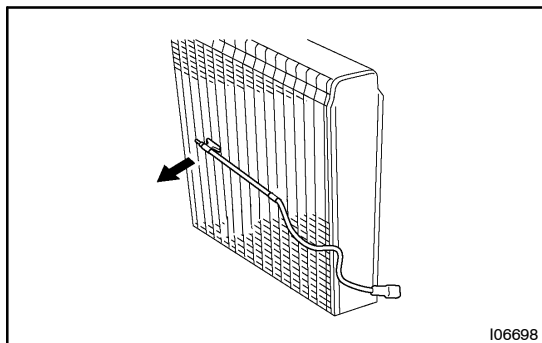

### 2. PULL OUT EVAPORATOR TEMPERATURE SENSOR FROM EVAPORATOR

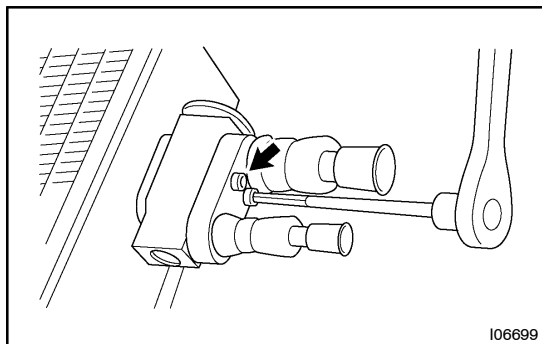

### 3. REMOVE EXPANSION VALVE

- (a) Remove the grommet.
- (b) Pry out the packing.

#### HINT:

At the time of reassembly, please refer to the following item.  
Do not reuse the packing.

- (c) Using a hexagon wrench (5.0 mm, 0.20 in.), remove the 2 bolts and separate the expansion valve, tube and evaporator.

**Torque: 3.4 N·m (35 kgf·cm, 30 in·lbf)**

#### NOTICE:

**Cap the open fittings immediately to keep moisture or dirt out of the system.**

#### HINT:

At the time of reassembly, please refer to the following item.  
Lubricate 4 new O-rings with compressor oil and install them to the tube.

### 4. REMOVE DRAIN HOSE