

## REMOVAL

### 1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM


HINT:

At the time of installation, please refer to the following item.

Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

**Specified amount: 1,050 ± 50 g (37.03 ± 1.76 oz.)**

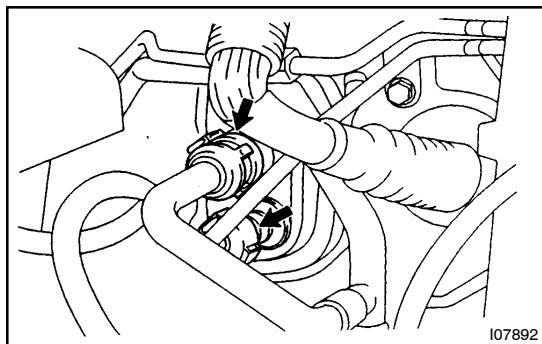


### 2. DISCONNECT LIQUID AND SUCTION TUBES

(a) Using SST, remove the 2 piping clamps.

SST 09870-00025 (Liquid tube)


09870-00015 (Suction tube)

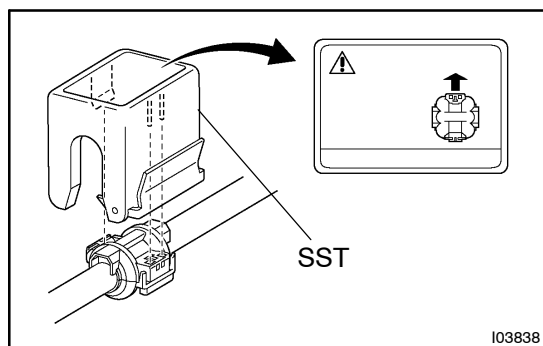

(1) Insert SST to piping clamp.

HINT:

Confirm the direction of the piping clamp claw and SST using the illustration showing on the caution label.

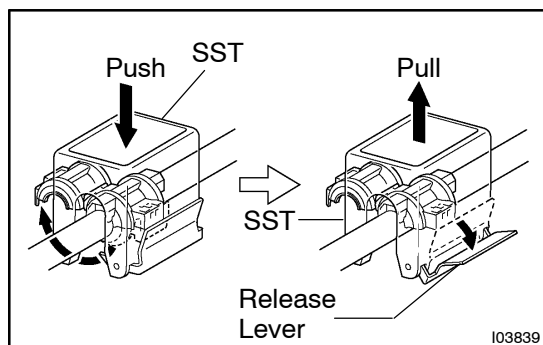

(2) Push down SST and release the clamp lock.

**NOTICE:**

**Be careful not to deform the tubes, when pushing SST.**

(3) Pull SST slightly and push the release lever, then remove the piping clamp with SST.

(4) Remove the piping clamp from SST.

(b) Disconnect the both tubes.

**NOTICE:**


**Cap the open fittings immediately to keep moisture or dirt out of the system.**


HINT:

At the time of installation, please refer to the following items.


- Lubricate 4 new O-rings with compressor oil and install them to the tubes.
- After connection, check the fitting for claw of the piping clamp.

### 3. REMOVE INSTRUMENT PANEL AND REINFORCEMENT (See page [BO-96](#))

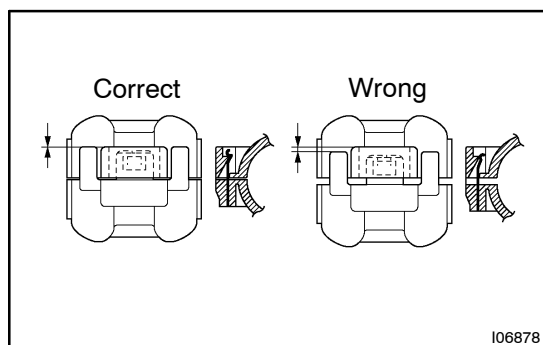

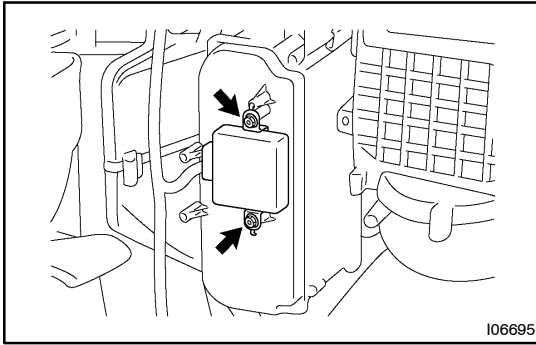**4. REMOVE ANTENNA RELAY**

- (a) Disconnect the connector.
- (b) Remove the 2 screws and antenna relay.

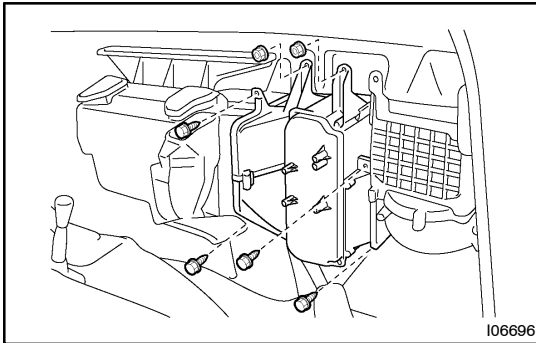**5. REMOVE COOLING UNIT**

- (a) Disconnect the connector.
- (b) Remove the 4 screws, 2 nuts and cooling unit.