



## SOLAR SENSOR INSPECTION

AC1LM-02

### 1. REMOVE SOLAR SENSOR

Using a screwdriver, pull out the solar sensor, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

### 2. INSPECT SOLAR SENSOR CIRCUIT

(See page [DI-800](#))

### 3. INSTALL SOLAR SENSOR

- (a) Connect the connector.
- (b) Insert the solar sensor to the instrument panel.