



COMBINATION METER LOCATION

BE078-04

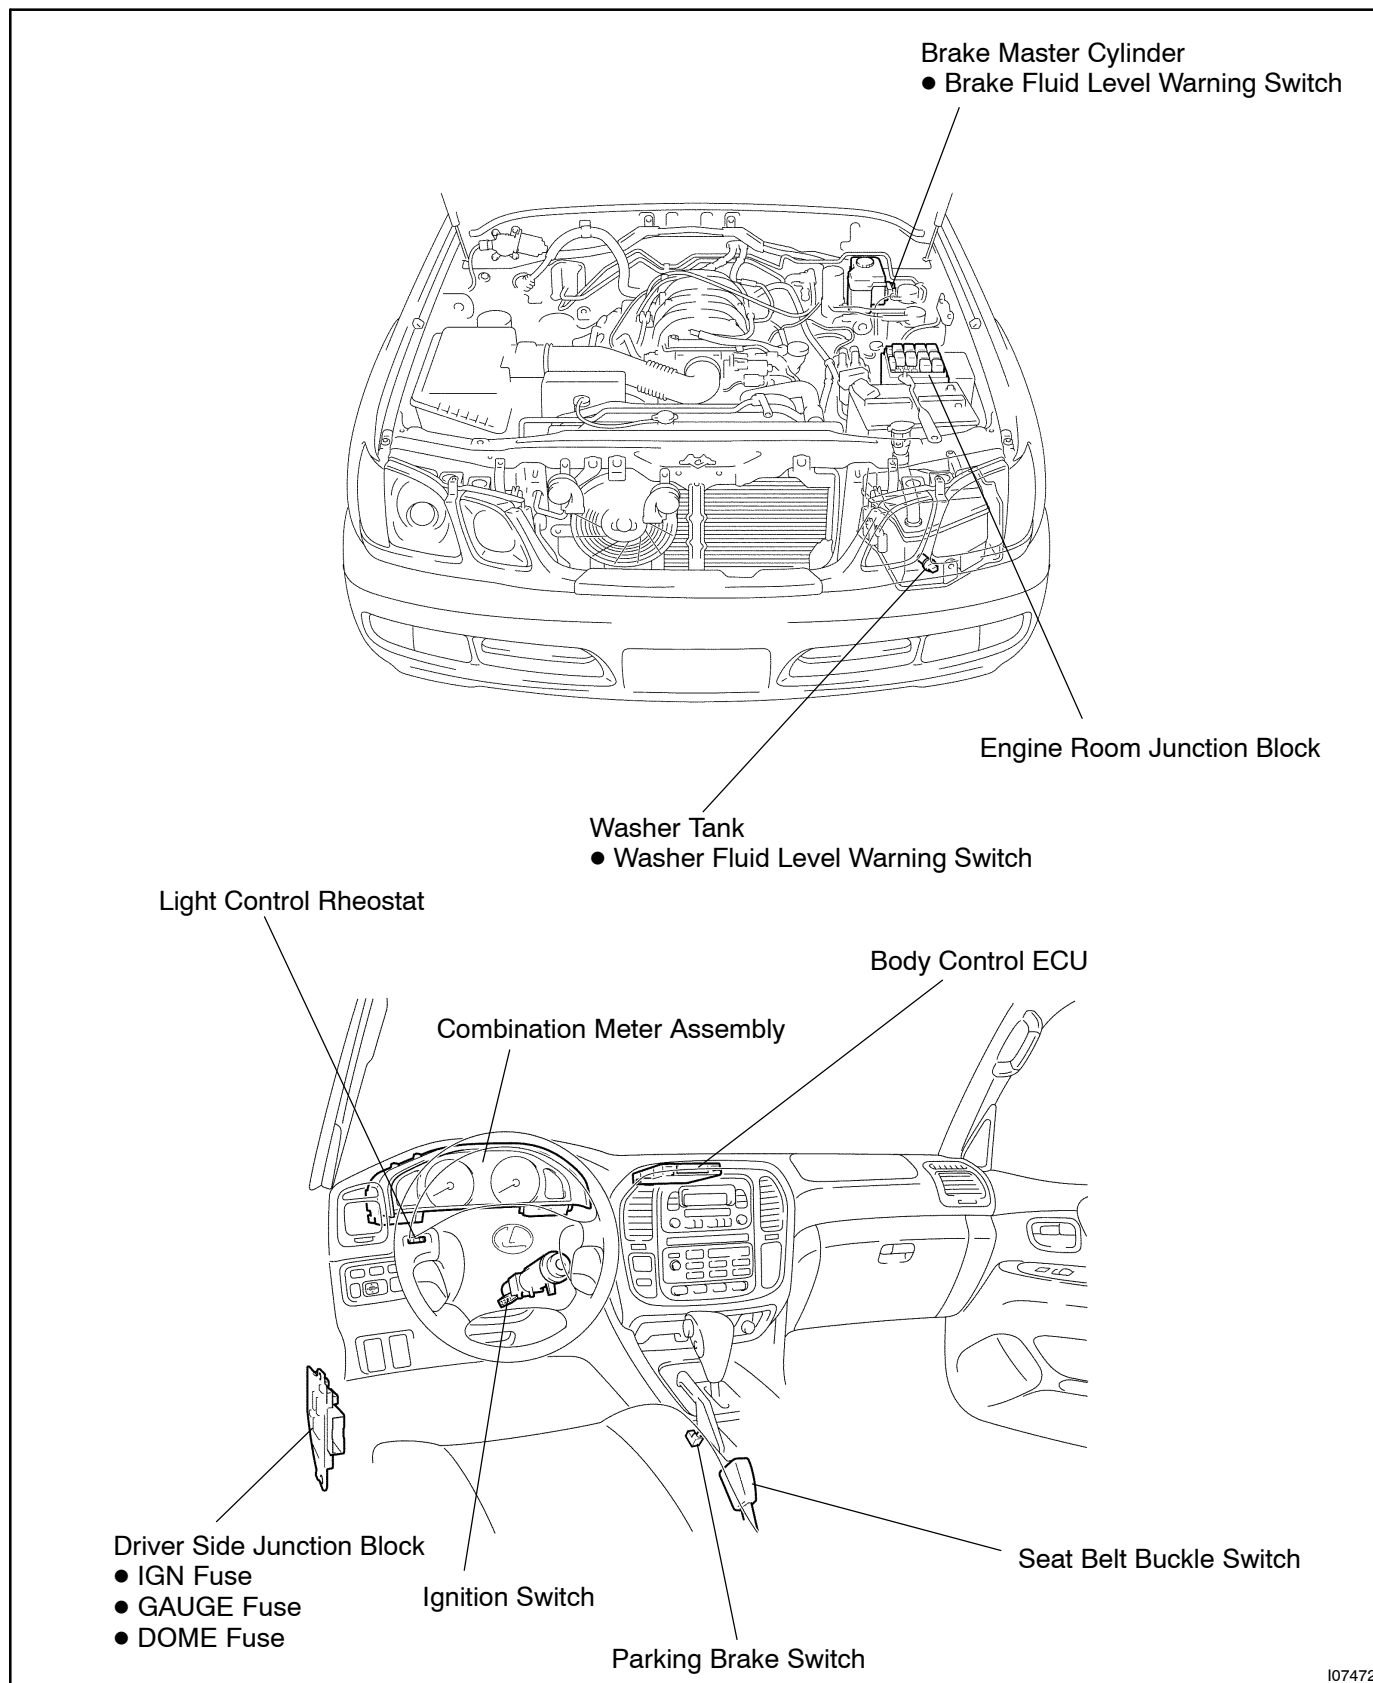


107472

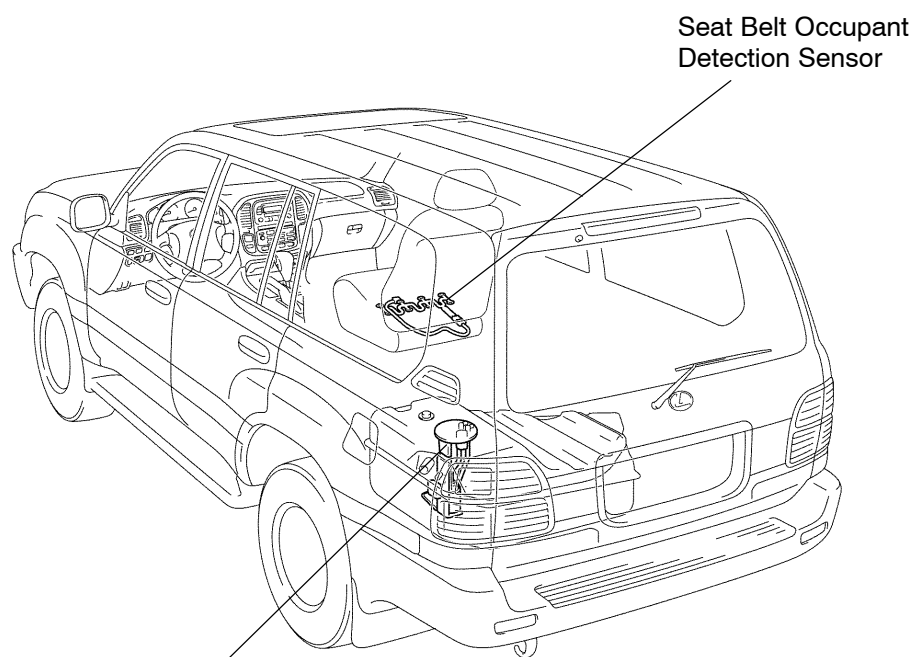

Seat Belt Occupant
Detection Sensor


Fuel Tank
● Fuel Sender Gauge

Engine Coolant Temperature Gauge

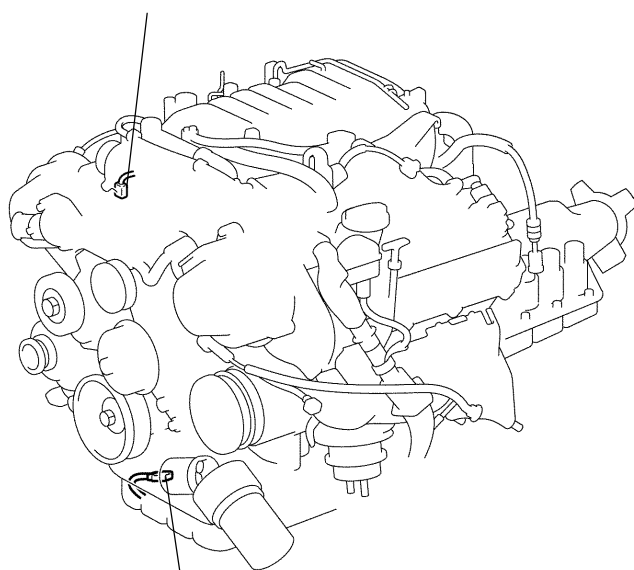

Oil Pressure Gauge

Park/Neutral Position Switch

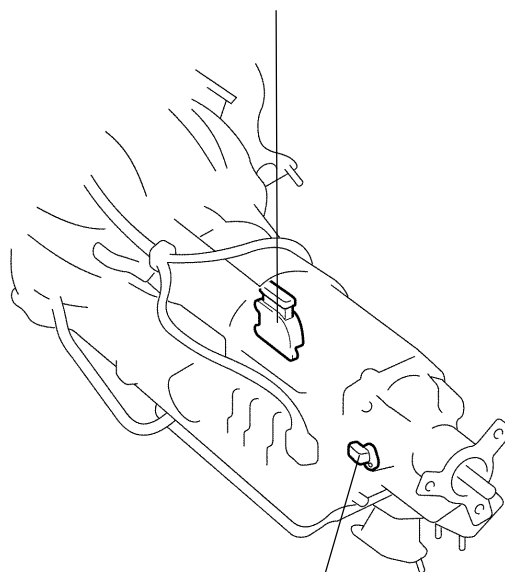

Speed Sensor

I07471