

REMOVAL

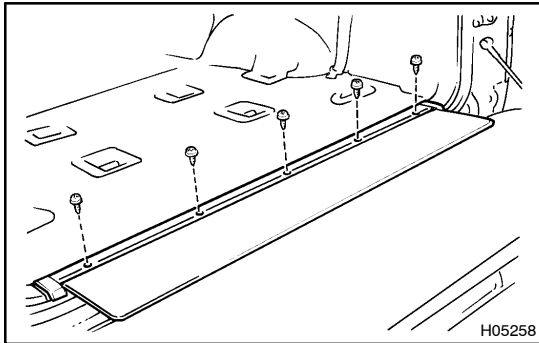
1. REMOVE REAR NO.2 SEATS

Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)

2. REMOVE REAR NO.1 SEATS

Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)

- Fold the seatback down.
- Unlock the seat lock, and swing the whole seat up and forward.
- Remove the 4 bolts and rear No.1 seat.

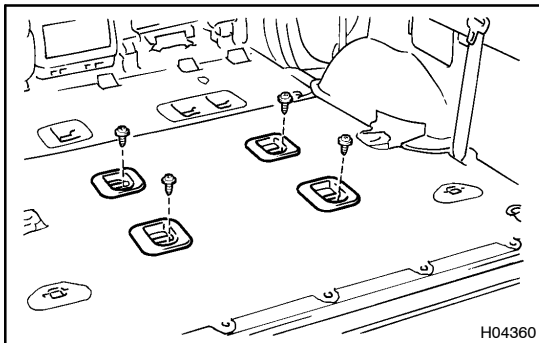


3. REMOVE REAR MAT SET PLATE

- Remove the 5 screws.
- Using a screwdriver, remove the rear mat set plate.

HINT:

Tape the screwdriver tip before use.



4. REMOVE NO.3 REAR SEAT PROTECTOR

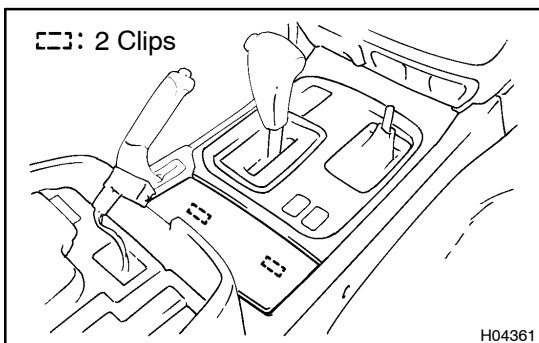
- Remove the screw.
- Remove the No.3 rear seat protector.

5. REMOVE THESE PARTS:

- No.3 seat front bracket cover
- No.3 seat bracket support cover
- No.1 rear seat protector
- No.2 rear seat protector
- Front seats

(See page [BO-119](#))

Torque: 37 N·m (375 kgf·cm, 27 ft·lbf)

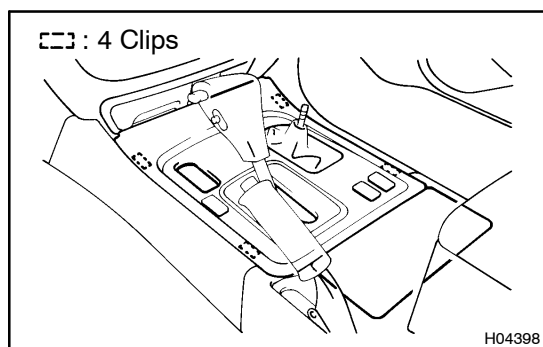


6. REMOVE CONSOLE CUP HOLDER BOX

Using a screwdriver, remove the console cup holder box.

HINT:

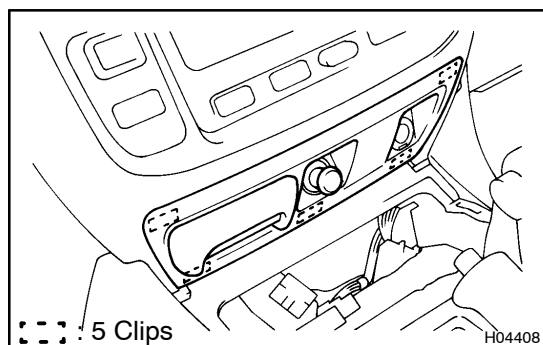
Tape the screwdriver tip before use.

**7. REMOVE REAR CONSOLE PANEL**

- (a) Remove the transfer shift lever knob.
- (b) Using a screwdriver, remove the rear console panel.

HINT:

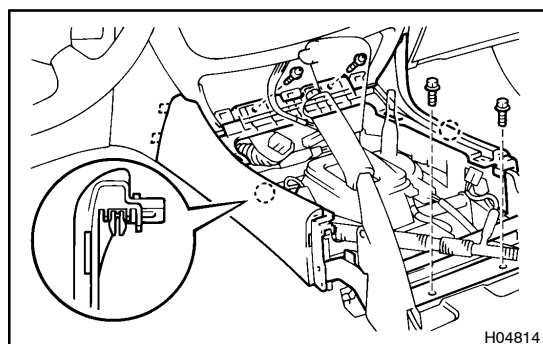
Tape the screwdriver tip before use.

**8. REMOVE CENTER LOWER CLUSTER FINISH PANEL**

Using a screwdriver, remove the center lower cluster finish panel, then disconnect the connectors.

HINT:

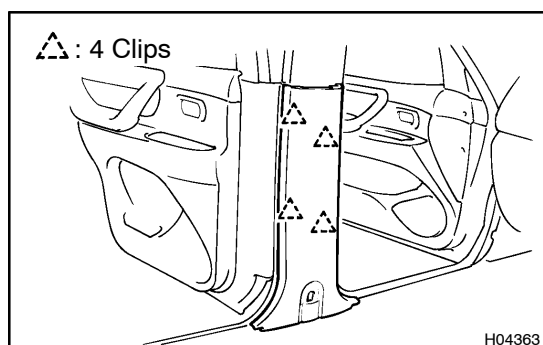
Tape the screwdriver tip before use.

**9. REMOVE FRONT CONSOLE BOX**

Remove the 2 screws and front console box.

10. REMOVE THESE PARTS:

- (a) Front door scuff plates
- (b) Rear door scuff plates
- (c) Front door opening trims
- (d) Rear door opening trims

**11. REMOVE CENTER PILLAR LOWER GARNISH**

- (a) Using a screwdriver, remove the seat belt floor anchor cover caps.

HINT:

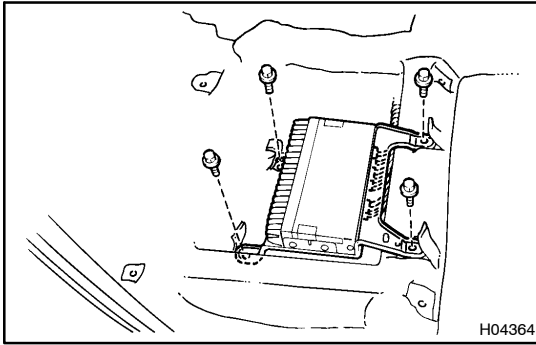
Tape the screwdriver tip before use.

- (b) Remove the bolts and front seat outer belt floor anchors.
- (c) Using a screwdriver, remove the center pillar lower garnishes as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

12. REMOVE REAR FLOOR CARPET

**13. REMOVE FRONT FLOOR CARPET**

- (a) Remove the 4 bolts.
- (b) Remove the power amplifier.
- (c) Remove the front carpet.