

REMOVAL

1. REMOVE SEAT TRACK OUTER COVERS

Using a screwdriver, remove the 4 seat track outer covers.

HINT:

Tape the screwdriver tip before use.

2. REMOVE FRONT SEAT

(a) Remove the 4 bolts.

Torque: 42 N·m (429 kgf·cm, 31 ft·lbf)

(b) Disconnect the connector, then remove the front seat.

NOTICE:

Be careful not to damage the body.