

| | | |
|------------|-----------------|---------------------------------------|
| DTC | B2798/99 | Communication malfunction No.2 |
|------------|-----------------|---------------------------------------|

CIRCUIT DESCRIPTION

| DTC No. | DTC Detecting Condition | Trouble Area |
|----------|-------------------------|---|
| B2798/99 | Communication error | <ul style="list-style-type: none"> • Key • Transponder Key Coil • Transponder Key Amplifier • Wire harness • ECM |

WIRING DIAGRAM

See page [DI-692](#).

INSPECTION PROCEDURE

| | |
|----------|--|
| 1 | Check transponder key coil (See page BE-195). |
|----------|--|

NG

Replace transponder key coil

OK

| | |
|----------|---|
| 2 | Check harness and connector between transponder key amplifier and ECM. |
|----------|---|

NG

Repair or replace harness and connector

OK

| | |
|----------|---|
| 3 | Does the system operate normally after replacement of transponder key amplifier? |
|----------|---|

Yes

Replace transponder key amplifier.

No

Replace ECM