



PARTS LOCATION

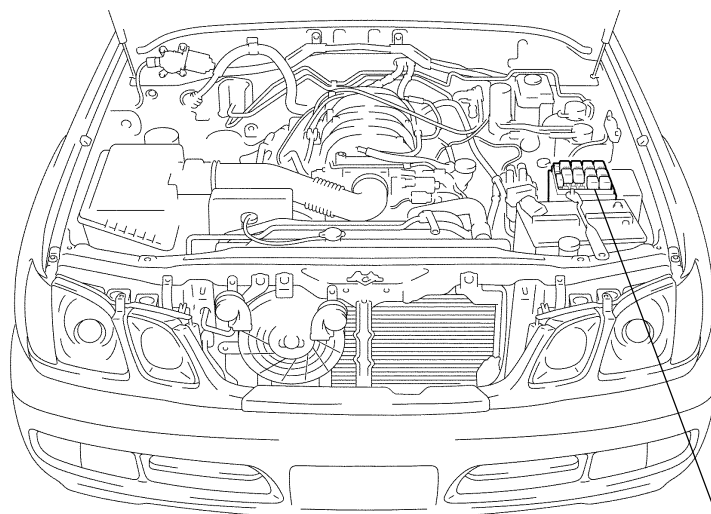

Engine Room Junction Block
● EFI Fuse

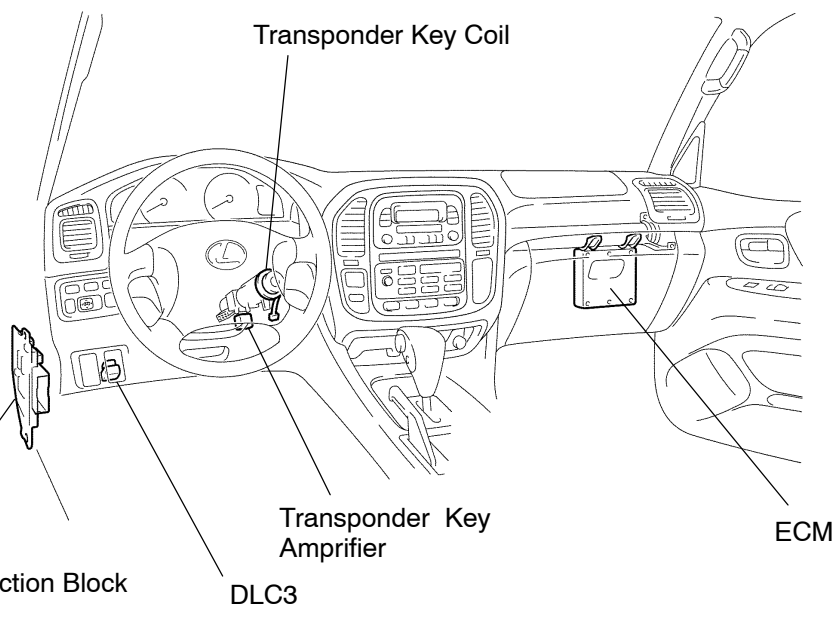

Driver Side Junction Block
● IGN Fuse

DLC3

ECM

Transponder Key
Amplifier

Transponder Key Coil