



## PARTS LOCATION

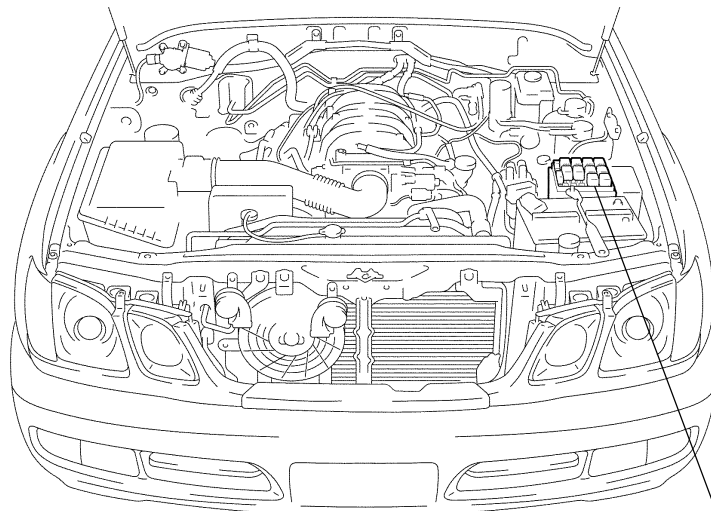

Engine Room Junction Block  
• EFI Fuse

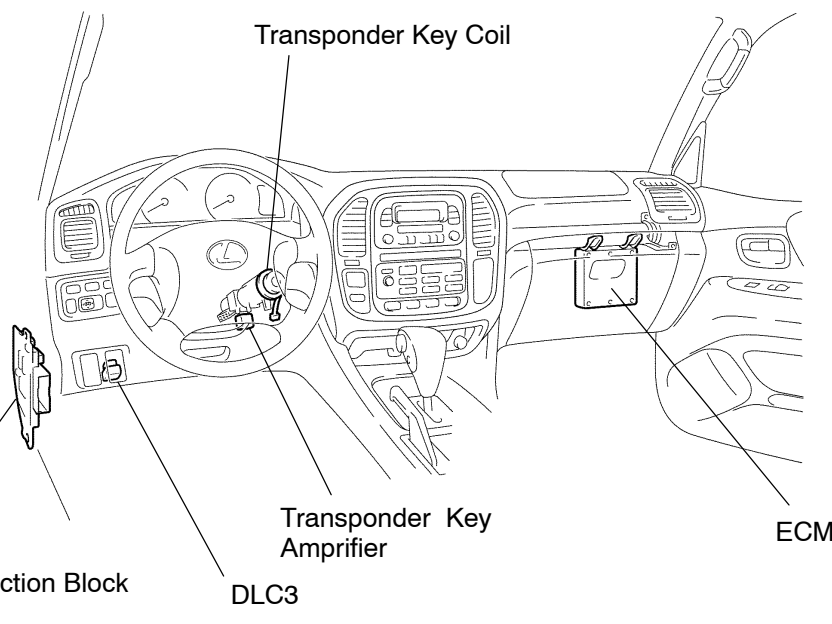

Driver Side Junction Block  
• IGN Fuse

DLC3

Transponder Key  
Amplifier

ECM