



INSPECTION

INSPECTION TRANSPONDER KEY COIL CONTINUITY

Check that continuity exists between terminals 1 and 2.
If continuity is not as specified, replace the coil.