



## LOCATION

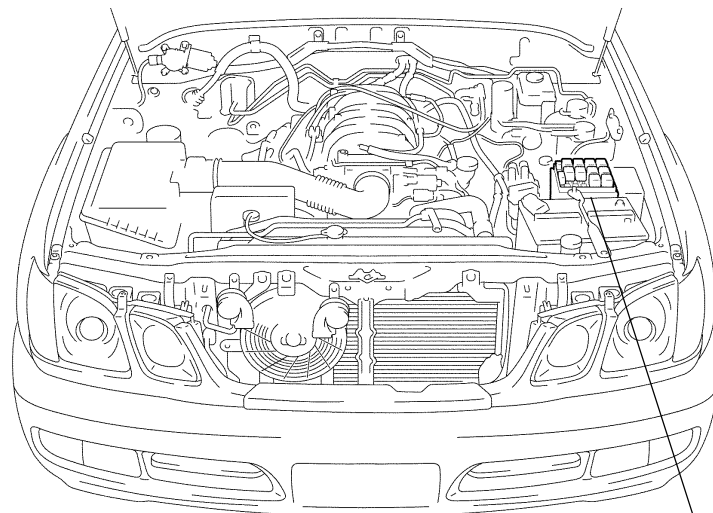

Engine Room Junction Block  
● EFI Fuse

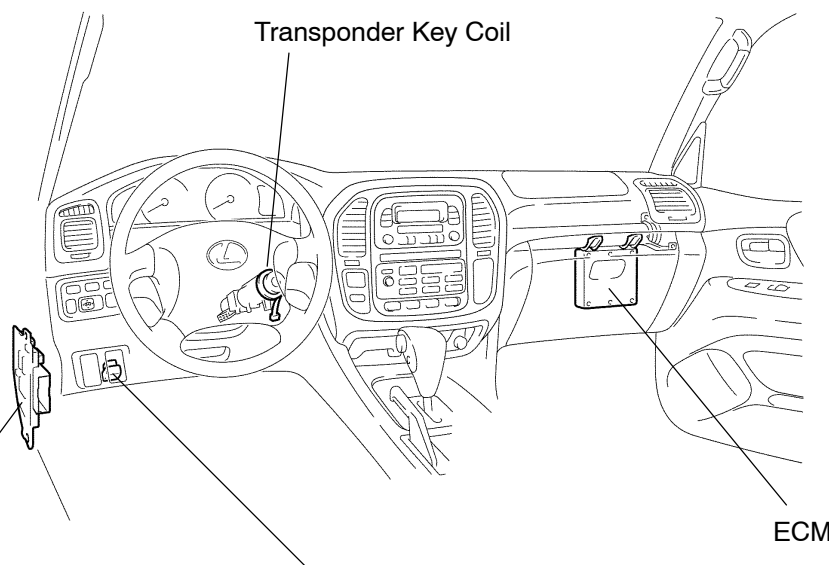

Driver Side Junction Block  
● IGN Fuse

DLC3

ECM