


## REMOVAL

### NOTICE:

- If the wiring connector of the SRS is disconnected and the ignition switch is in ON or ACC position, DTCs will be recorded.
- Never use the airbag parts from another vehicle. When replacing parts, replace them with new parts.

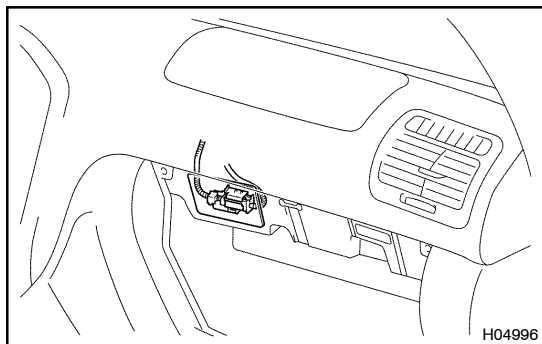


### 1. DISCONNECT AIRBAG CONNECTOR

- Remove the glove compartment door.
- Remove the No.1 under cover from the lower No.2 finish panel.

### NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

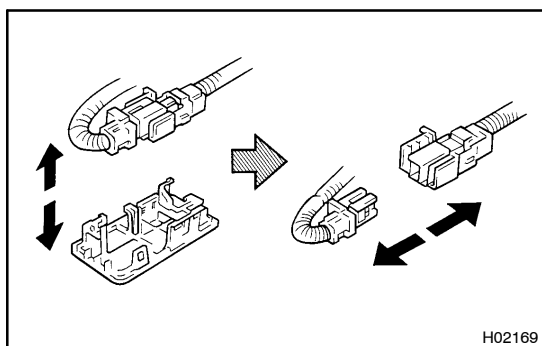

- Pull up the connector.
- Disconnect the front passenger airbag connector.

### 2. REMOVE INSTRUMENT PANEL


(See page [BO-96](#))

### 3. REMOVE CENTER BRACKET

### 4. REMOVE DEFROSTER NOZZLE ASSEMBLY

### 5. REMOVE NO.5 HEATER TO REGISTER DUCT

### 6. REMOVE NO.2 SIDE DEFROSTER NOZZLE DUCT

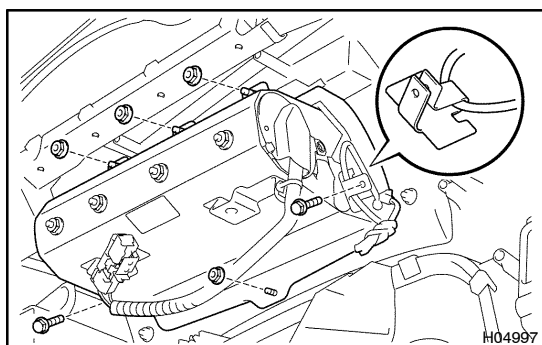

### 7. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

- Remove the 2 bolts and airbag door straps.
- Remove the 4 nuts, then remove the front passenger airbag assembly.

### CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment side facing downward.
- Never disassemble the front passenger airbag assembly.