


DRIVE BELT ON-VEHICLE INSPECTION

AC1JX-01

1. INSPECT DRIVE BELT'S INSTALLATION CONDITION

Check that drive belt fits properly in the ribbed grooves.

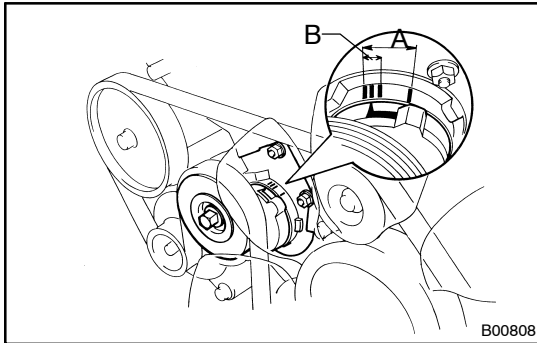

2. INSPECT DRIVE BELT TENSION

Check that the tension is within A range on the auto tensioner scale.

If the tension is not within the A range on the scale, replace the belt with a new one.

HINT:

When replacing the drive belt with a new one, the belt's tension should be within the B range on the belt tensioner scale.