


## REMOVAL

1. REMOVE V-BANK COVER
2. REMOVE INTAKE AIR CONNECTOR
3. DISCONNECT ENGINE WIRE FROM LH CYLINDER HEAD COVER

Disconnect the 2 wire clamps and engine wire.

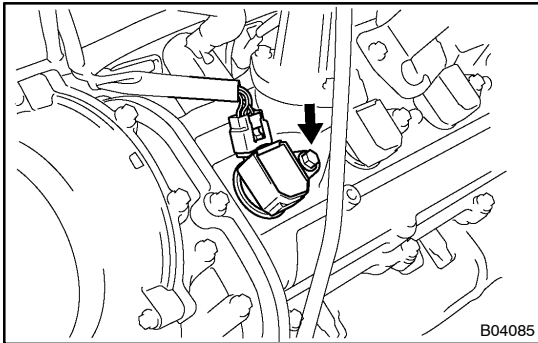

4. DISCONNECT IGNITION COIL (WITH IGNITER) CONNECTORS
5. REMOVE IGNITION COILS (WITH IGNITER) FROM SPARK PLUGS

Remove the bolt, and pull out the ignition coil (with igniter). Remove the 8 ignition coils (with igniter).

**Torque: 7.5 N·m (80 kgf·cm, 66 in·lbf)**