


## STARTER RELAY INSPECTION

ST096-01

### 1. REMOVE STARTER RELAY (Marking: "ST")

Remove the relay box cover and starter relay.

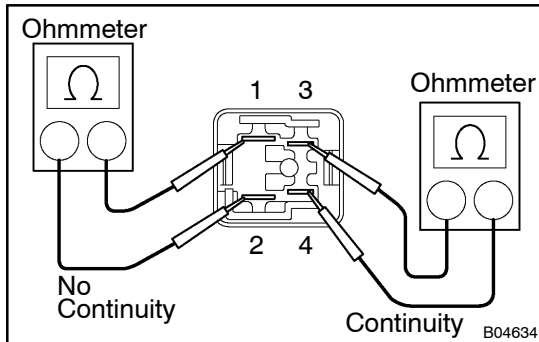


### 2. INSPECT RELAY CONTINUITY

- (a) Using an ohmmeter, check that there is continuity between terminals 3 and 4.

If there is no continuity, replace the relay.

- (b) Check that there is no continuity between terminals 1 and 2.

If there is continuity, replace the relay.

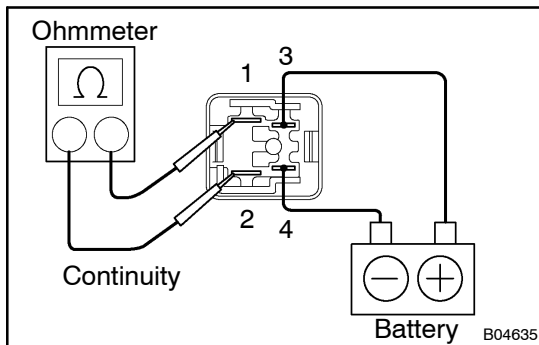

### 3. INSPECT RELAY OPERATION

- (a) Apply battery voltage across terminals 3 and 4.

- (b) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

### 4. REINSTALL STARTER RELAY