


## Height Control Indicator Light Circuit

### CIRCUIT DESCRIPTION

This indicator light indicates the present vehicle height. The indicator light of the target vehicle height selected by the height select switch is flashed while the height control is operated and waited.

### WIRING DIAGRAM

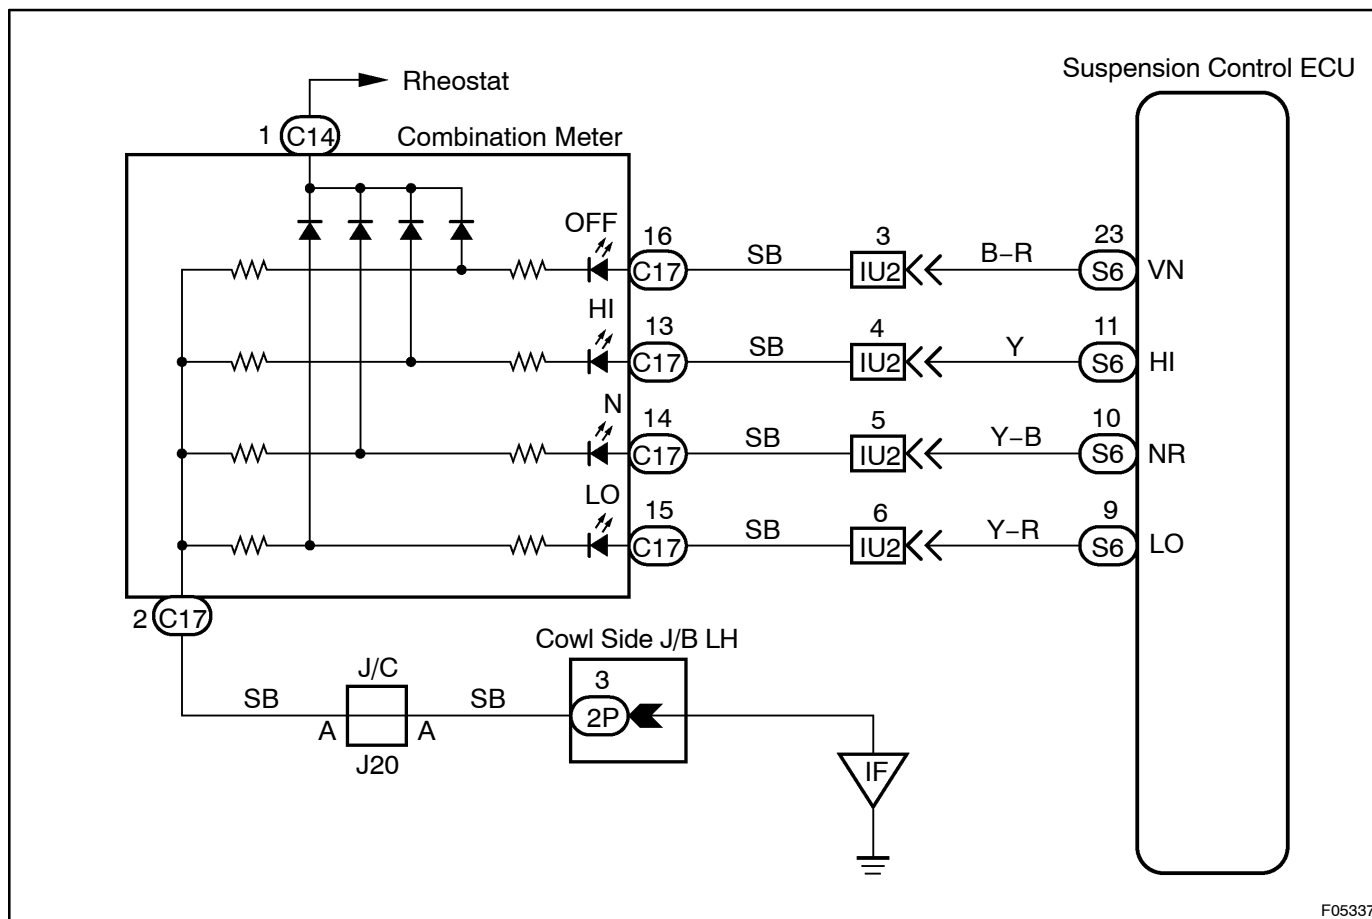

F05337

### INSPECTION PROCEDURE

- 1 Check height control indicator light.

See combination meter troubleshooting on page [BE-79](#).

NG

Repair bulb or combination meter assembly.

OK

2	<b>Check for open and short circuit in harness and connector between height control indicator and suspension control ECU (See page <a href="#">IN-33</a>).</b>
---	--

NG

**Repair or replace harness or connector.**

OK

**Check and replace suspension control ECU.**