



## DISASSEMBLY

### 1. REMOVE STEERING WHEEL(See page [SR-12](#))

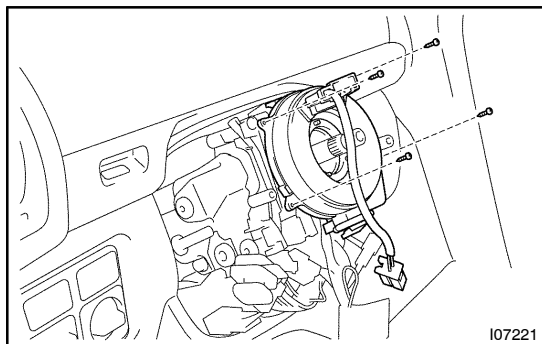


### 2. REMOVE SPIRAL CABLE

Remove the 4 screws and the spiral cable.

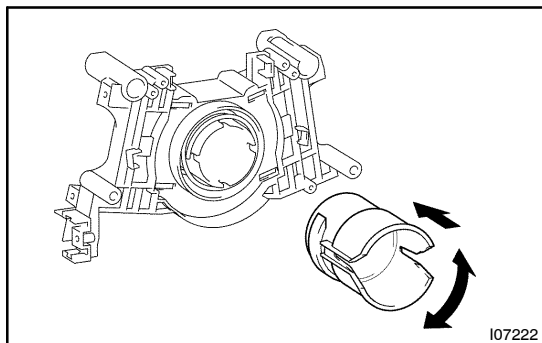


### 3. REMOVE CANCEL CAM

Turn the cancel cam with pressing it and pull it out.

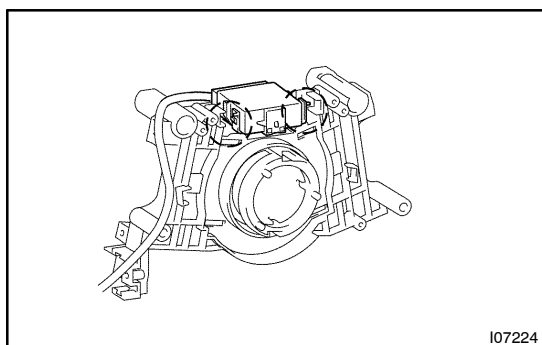

### 4. REMOVE STEERING ANGLE SENSOR

Disengage the 2 claws and the steering angle sensor.

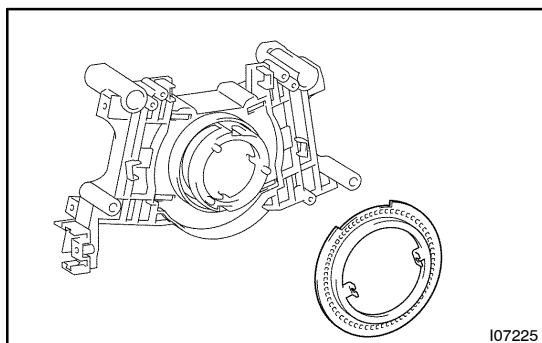

### 5. REMOVE STEERING POSITION DISC