

## HOOD SUPPORT REPLACEMENT

### 1. REMOVE SUPPORT FROM HOOD


Remove the bolt and support from the hood.

HINT:

While supporting the hood with by hand, remove the hood.

### 2. REMOVE SUPPORT FROM BODY

Remove the bolt and support.

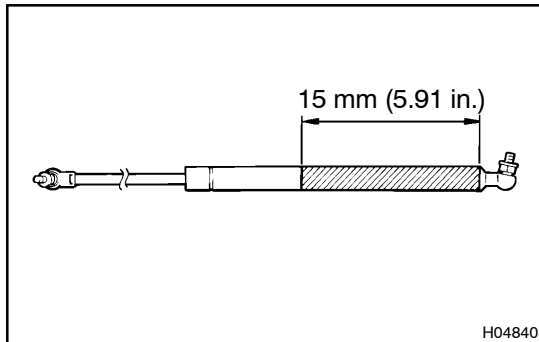

### 3. IF NECESSARY, REPLACE HOOD SUPPORT

#### NOTICE:

##### Handling the hood support

- Do not disassemble the support because the cylinder is filled with pressurized gas.
- If the support is to be replaced, drill a 2.0 – 3.0 mm (0.079 – 0.118 in.) hole in the area shown in the illustration to completely release the high-pressure gas before disposing of it.
- When drilling, chips may fly out so work carefully.
- The gas is colorless, odorless and non-toxic.
- When working, handle the support carefully. Never score or scratch the exposed part of the piston rod, and allow any paint or oil to get it on.
- Do not turn the piston rod and cylinder with the support fully extended.

### 4. INSTALL HOOD SUPPORT

Install the hood support.

**Torque: 17 N·m (170 kgf·cm, 12 ft·lbf)**