


## REMOVAL

### 1. REMOVE REAR WIPER ARM

- (a) Open the cover.
- (b) Remove the nut and rear wiper arm.
- (c) Remove the grommet.

### 2. REMOVE THESE PARTS:

- (a) Assist grip
- (b) Inside handle bezel

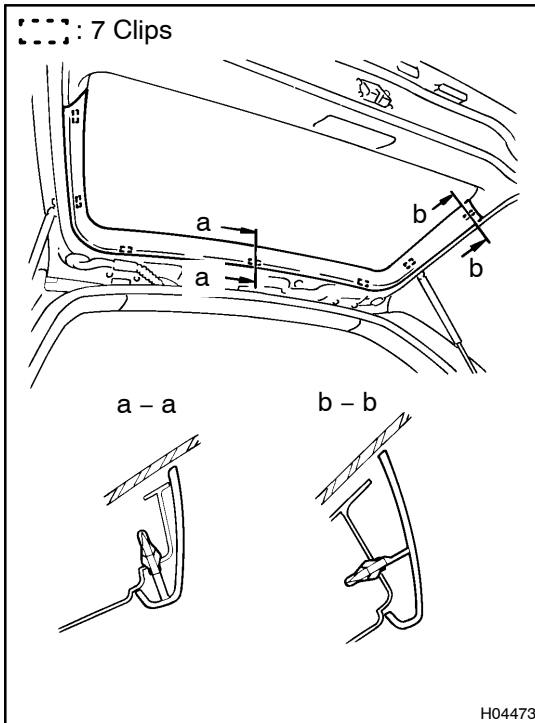


### 3. REMOVE CENTER BACK DOOR GARNISH

Using a screwdriver, remove the center back door garnish.

HINT:

Tape the screwdriver tip before use.

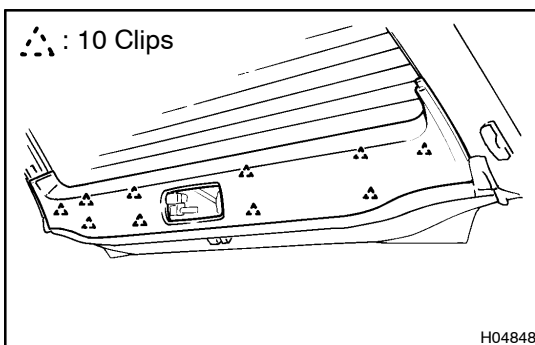


### 4. REMOVE BACK DOOR GARNISH

Using a screwdriver, remove the back door garnish.

HINT:

Tape the screwdriver tip before use.

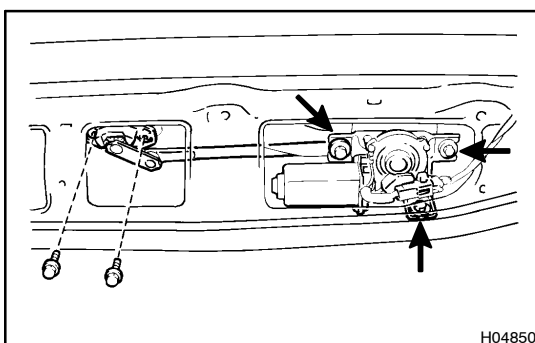

### 5. REMOVE REAR WIPER MOTOR AND LINK ASSEMBLY

- (a) Disconnect the connector.
- (b) Remove the 2 bolts.
- (c) Unfasten the 3 bolts and remove the rear wiper motor with link assembly.