


## DISASSEMBLY


### 1. REMOVE FAN

Remove the 3 screws and fan.

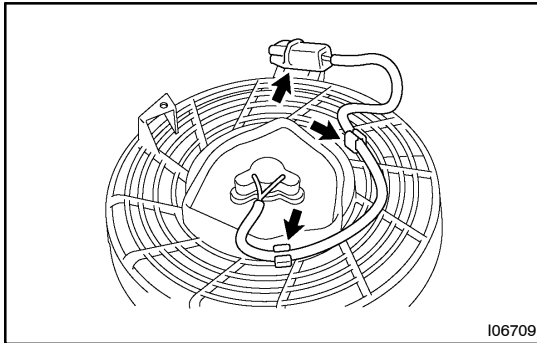

### 2. REMOVE FAN MOTOR

(a) Disconnect the wire harness clamps.

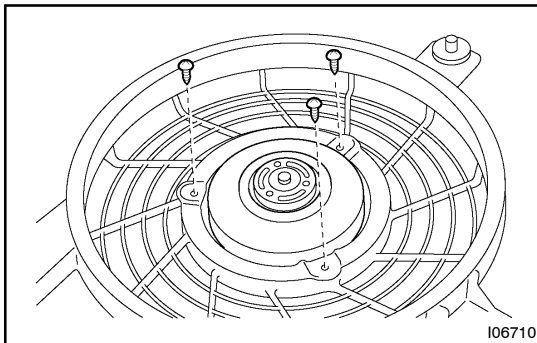

(b) Remove the 3 screws and fan motor.