

## DISASSEMBLY

### 1. REMOVE HEADREST

### 2. REMOVE SEATBACK BOARD

Using a screwdriver, remove the seatback board as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

### 3. REMOVE RECLINING ADJUSTER RELEASE HANDLE

(a) Using a screwdriver, remove the cover.

HINT:


Tape the screwdriver tip before use.

(b) Remove the screw and reclining adjuster release handle.

### 4. REMOVE NO.1 RECLINING COVER

(a) Remove the 4 hog rings and open the seatback cover.


(b) Remove the 2 corner pad.

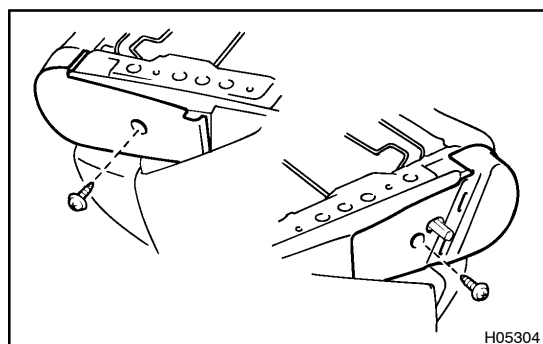

(c) Remove the 2 screws and 2 No.1 reclining covers as shown in the illustration.

### 5. REMOVE SEAT CUSHION UNDER COVER

Remove the 2 screws and 2 seat cushion under covers.

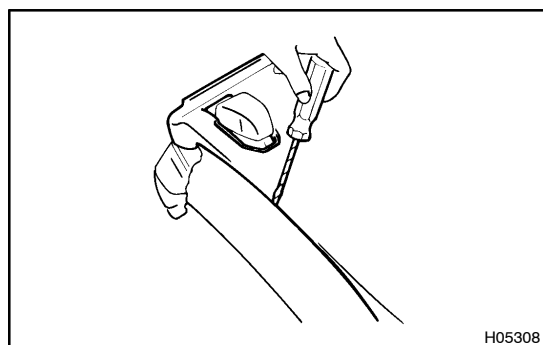


### 6. REMOVE SEAT CUSHION UNDER COVER SUB-ASSEMBLY


(a) Using a screwdriver, disengage the hooks as shown in the illustration.

HINT:


Tape the screwdriver tip before use.

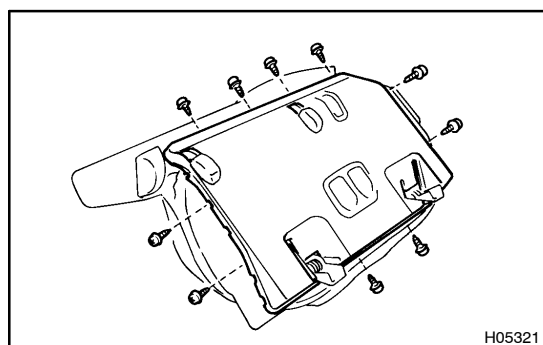

(b) Remove 10 screws and seat cushion under cover sub-assembly.

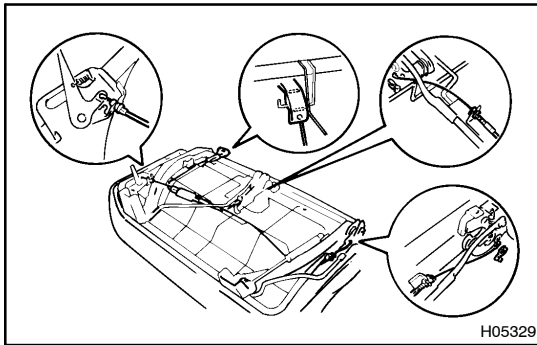**7. REMOVE NO.1 FOLD SEAT LOCK CONTROL CABLE**


Remove the 2 clamps and No.1 fold seat lock control cable as shown in the illustration.

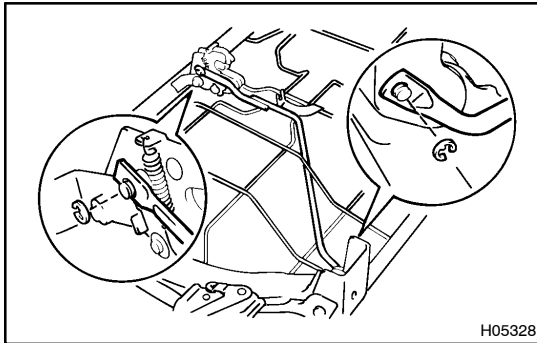**8. REMOVE RH NO.1 SEAT LEG STAY**


Using a screwdriver, remove the 2 E-rings and No.1 seat leg stay.

**HINT:**


Tape the screwdriver tip before use.

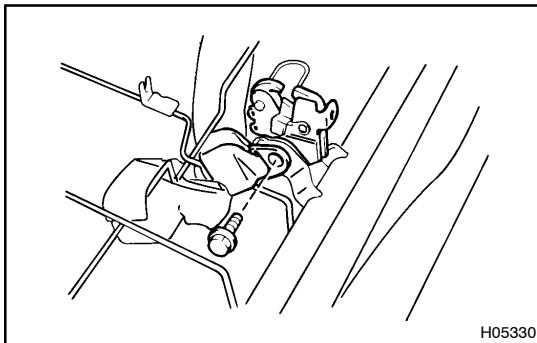**9. REMOVE RH REAR SEAT LOCK**

- (a) Remove the screw and rear seat lock cover.
- (b) Remove the bolt, seat belt anchor and inner belt.  
**Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)**
- (c) Remove the RH rear seat lock.

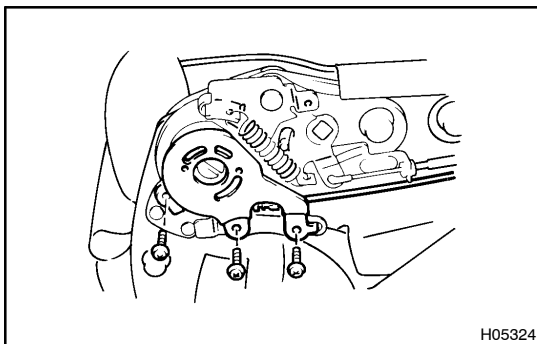**10. REMOVE SEATBACK ASSEMBLY**


- (a) Remove the 3 screws and seat belt reclining detecting part.  
**Torque: 3.9 N·m (40 kgf·cm, 35 in·lbf)**

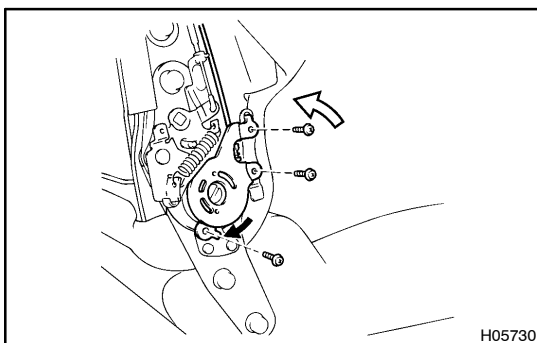


**HINT:**

- At the time of assembly, please refer to the following items.
- Tighten the 2 screws on the seatback side.
- Fold down the seatback forward and raise it up to the first lock position.
- Push the installation part of seat belt reclining detecting part on the cushion side to the rear side of the seat cushion for initial positioning.
- Check visually that the reference holes are penetrated.


- Tighten the screws on the cushion side of seat belt reclining detecting part.

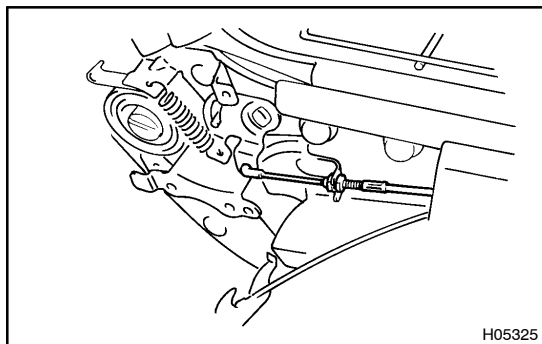

- (b) Loosen the nut, remove the reclining connecting wire of LH side edge.

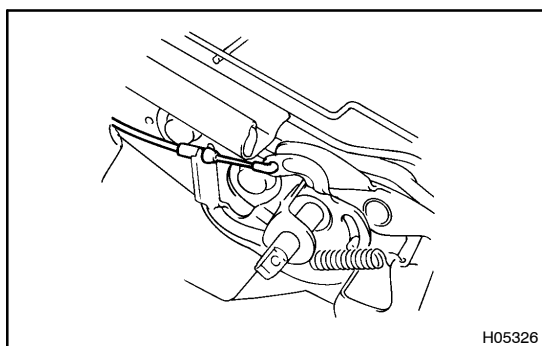

- (c) Remove the reclining connecting wire of RH side edge.

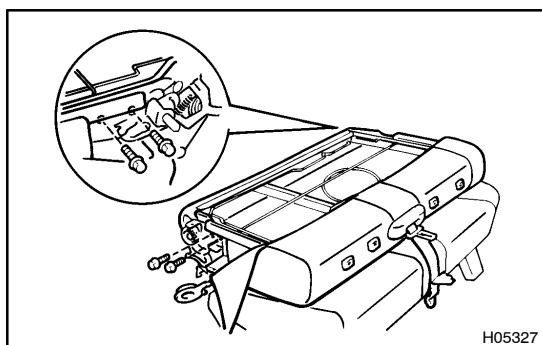


- (d) Remove the 4 bolts and seatback assembly.  
**Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)**

#### 11. w/ Armrest:

##### REMOVE ARMREST

- (a) Remove the 2 nuts and armrest.  
(b) Remove the 2 screws and 2 hinge covers.  
(c) Remove the 2 bolts and hinges.

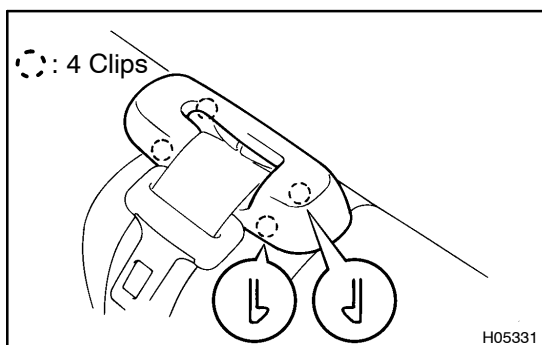

#### 12. REMOVE SEATBACK FRAME


- (a) Using a screwdriver, remove the rear seat shoulder belt cover.

##### HINT:

Tape the screwdriver tip before use.

- (b) Remove the 4 headrest supports.  
(c) Disengage the hooks, remove the seatback frame.

#### 13. REMOVE SEAT ADJUSTER CONTROL CABLE

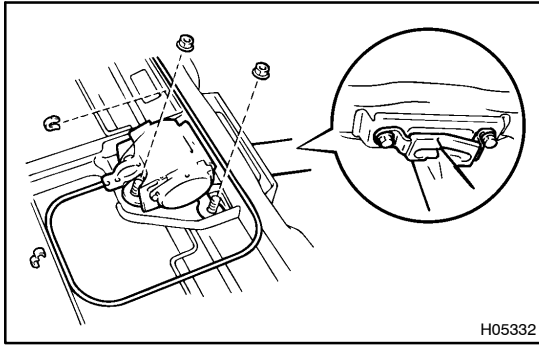**14. REMOVE REAR SEAT OUTER BELT**

- (a) Remove the 2 bolts and rear seat shoulder belt guide.  
**Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)**

**HINT:**

- At the time of assembly, please refer to the following item.
- Install the shoulder belt guide to the seatback frame with a slit in the guide facing to the rear side of the vehicle.

- (b) Remove the 2 nuts and rear seat outer belt.

**Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)**

**15. REMOVE NO.1 PROTECTOR****16. REMOVE SEATBACK COVER**

Remove the hog rings and seatback cover.

**17. REMOVE SEAT CUSHION FRAME**

Remove the hog rings and seat cushion frame.

**18. REMOVE REAR NO.1 SEAT ADJUSTER**


- (a) Remove the 2 bolts and rear No.1 seat outer adjuster.

**Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)**


- (b) Remove the 2 bolts and rear No.1 seat inner adjuster.

**Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)**

- (c) Remove the 2 hinge covers from the outer and inner adjuster.

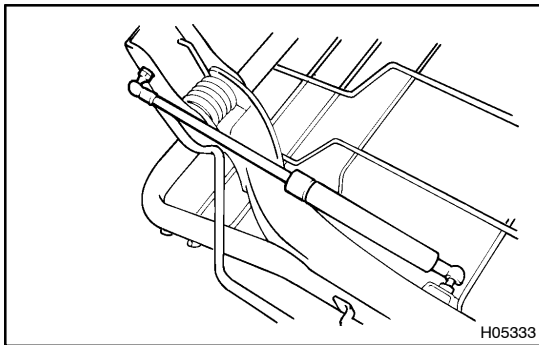**19. REMOVE REAR SEAT STAY**

Remove the 2 bolts and rear seat stay.

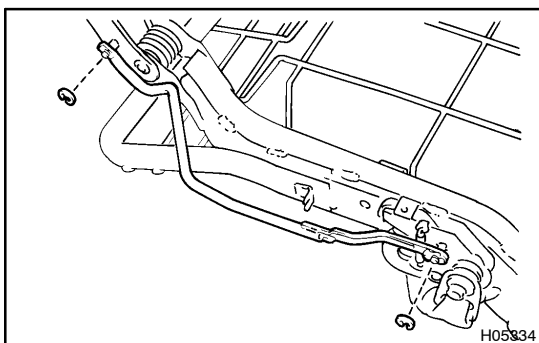**20. REMOVE LH NO.1 SEAT LEG STAY**

Using a screwdriver, remove the 2 E-rings and LH No.1 seat leg stay.

**21. REMOVE REAR SEAT CUSHION HINGE**

- (a) Using a screwdriver, remove the 2 E-rings.  
 (b) Remove the 2 hinge pins, 2 cushion spacers, 2 cushion support springs and 2 rear seat cushion hinges.

**22. REMOVE LH REAR SEAT LOCK**

Unfasten the bolt, then remove the inner belt and LH rear seat lock.