

## INSTALLATION

### NOTICE:

**Never use seat belt pretensioner from another vehicle. When replacing parts, replace them with new parts.**

#### 1. INSTALL FRONT SEAT OUTER BELT

- (a) Install the front seat belt parts by following the reverse order of removal and torque the following bolts.

- (1) Front seat outer belt retractor

**Torque:**

**Upper bolt: 4.9 N·m (50 kgf·cm, 43 in·lbf)**


**Lower bolt: 43 N·m (440 kgf·cm, 32 ft·lbf)**

- (2) Seat belt shoulder anchor

**Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)**

### NOTICE:

- **Make sure that the front seat outer belt is installed to the specified torque.**
- **If the front seat outer belt has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front seat outer belt with a new one.**
- **When installing the front seat outer belt, take care that the wiring does not interfere with other parts and is not pinched between other parts.**

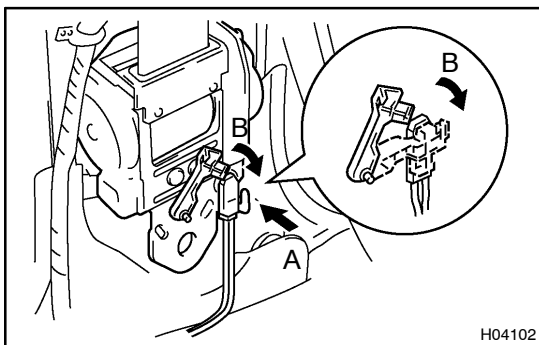

- (b) Connect the pretensioner connector in the order A and B, as shown in the illustration.

#### 2. INSTALL THESE PARTS:

- (a) Anchor cover cap  
 (b) Center pillar lower garnish  
 (c) Rear door scuff plate  
 (d) Rear door opening trim  
 (e) Front door scuff plate  
 (f) Front door opening trim