


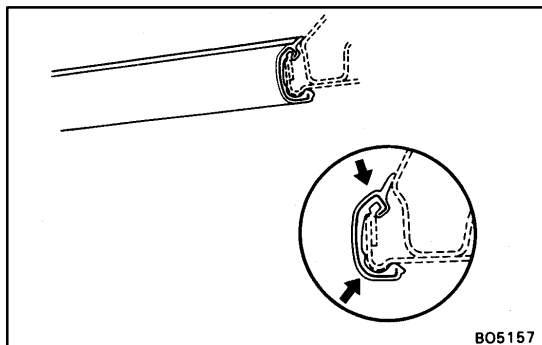

INSTALLATION

1. INSTALL ROOF DRIP MOULDING

Attach the upper edge of the moulding to the body flange. Tap on the moulding by hand.

2. INSTALL FRONT DOOR BELT MOULDING

3. INSTALL REAR DOOR BELT MOULDING

4. INSTALL QUARTER BELT MOULDING