


## INSTALLATION

### HINT:


Precautions for storing moulding materials:

- Store in cool place, avoiding direct sunlight, high temperature and dust.
- The moulding is of polyvinyl chloride, so do not allow it to come in contact with thinner or other solvent, open flame, or boiling water.
- The storage time for the moulding and adhesive are limited to about 9 months.

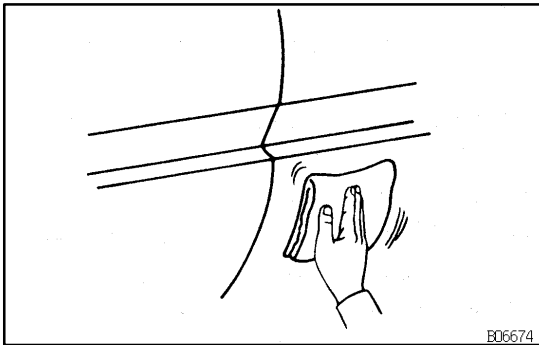

### 1. CLEAN MOULDING MOUNTING SURFACE

Wipe off stains with cleaner.

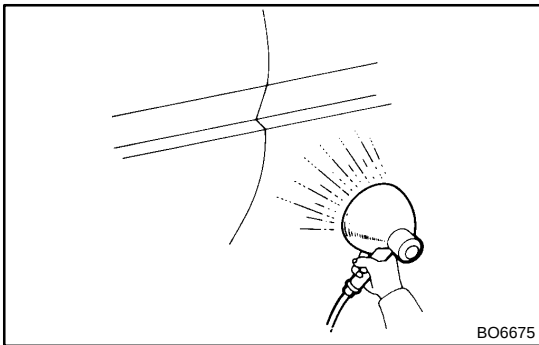


### 2. HEAT BODY MOUNTING SURFACE

Using a heat light, heat the body mounting surface to 30-50 °C (86-122 °F).

#### NOTICE:

**When the moulding is installed, the temperature of the mounting surface should be 20 °C (68 °F) or higher.**

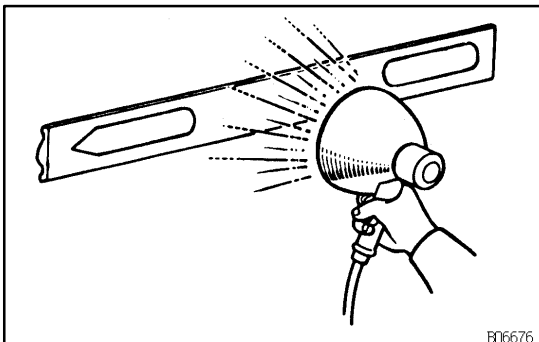


### 3. HEAT MOULDING

- (a) Using a heat light, heat the moulding to 30- 60 °C (86-140 °F).

#### NOTICE:

**Do not heat the moulding excessively.**

- (b) The temperature should not be higher than 80 °C (176 °F).

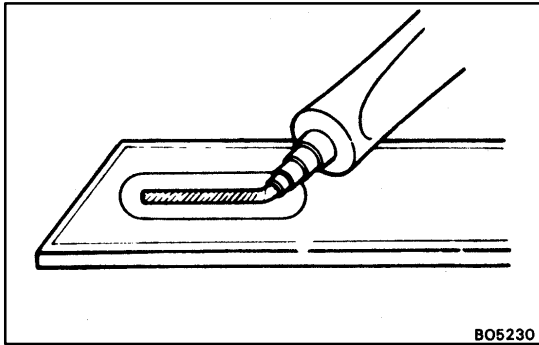**4. APPLY ADHESIVE TO MOULDING**

Apply adhesive to both punched out ends of the moulding.


**NOTICE:**

Install the moulding within 7 minutes after applying the adhesive.

Part No. 08850-00051

**5. LIFT MOULDING RELEASE SHEET FROM FACE OF MOULDING****NOTICE:**

When the moulding release sheet is removed, be sure that no dirt or dust can get onto the uncovered area.

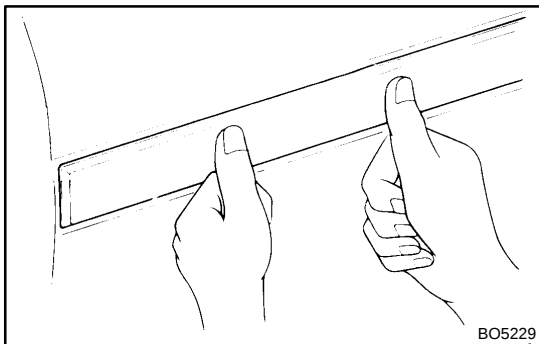**6. INSTALL MOULDING**

Push the moulding to the body, as shown in the illustration.

**NOTICE:**

- Be sure that the body and moulding are heated to the proper temperature.
- Do not depress the adhesive-coated parts excessively but just hold them down with your thumb.
- Scrape off any overflowing adhesive with a plastic spatula and clean the surface with a dry rag.
- After installation, do not wash the vehicle for 24 hours.