


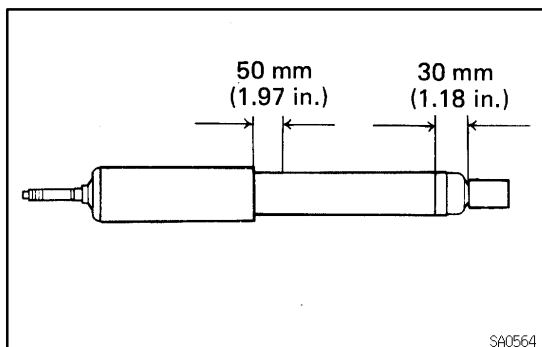

DISPOSAL

DISCARD SHOCK ABSORBER

Before discarding the shock absorber, drill a hole 2 - 3 mm (0.079 - 0.118 in.) in diameter at the location shown in the illustration to release the gas inside.

NOTICE:

When drilling, chips may fly out, work carefully. The gas is colorless, odorless and non-poisonous.