

INSTALLATION

1. CLEAN BODY MOUNTING SURFACE

- Using a heat light, heat the body mounting surface to 40 – 60 °C (104 – 140 °F).

NOTICE:

Do not heat the body excessively.

- Remove adhesive tape from the body.
- Wipe off stains with a cleaner.

2. CLEAN MOULDING


If reusing the moulding

- Using a heat light, heat the moulding to 20 – 40 °C (68 – 86 °F).

NOTICE:

Do not heat the moulding excessively.

- Remove the adhesive tape from the moulding.
- Wipe off stains with a cleaner.
- Apply new adhesive tape to the moulding as shown in the illustration.

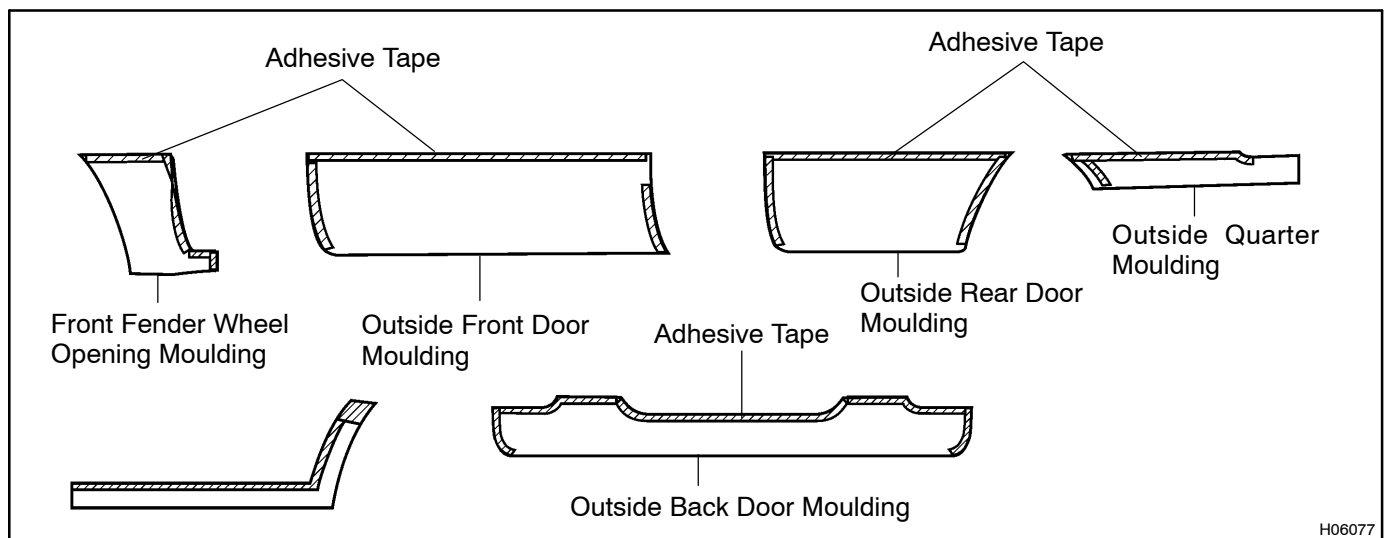

H06077

3. INSTALL MOULDING

- Using a heat light, heat the body and moulding.

Body: 40 – 60 °C (104 – 140 °F)

Moulding: 20 – 30 °C (68 – 86 °F)

NOTICE:

Do not heat the moulding excessively.

- Remove the moulding release sheet from the face of moulding.

NOTICE:

When the moulding release sheet is removed, make sure that no dirt or dust can get onto the uncoated area.

- (c) Align the bosses with their corresponding holes in the body, and press firmly on the moulding.


NOTICE:

Do not apply excessive force onto the moulding, but apply steady pressure with your thumbs.

- (d) Install the moulding.


4. INSTALL ROCKER PANEL MOULDING

Install the rocker panel moulding with 10 screws.

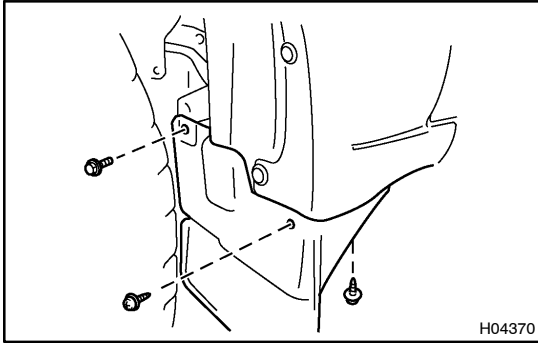

5. INSTALL FRONT MUDGUARD

Install the front mudguard with 2 screws and bolt.

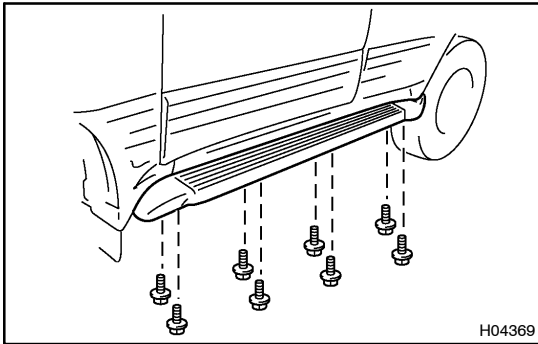

6. w/ Side Step:

INSTALL SIDE STEP SUB-ASSEMBLY

Install the step sub-assembly with the 8 bolts.