

DTC	C1242 / 42	IG2 Power Source Circuit
------------	-------------------	---------------------------------


CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1242 / 42	With the vehicle running, open in IG2 is detected for more than 7 secs.	<ul style="list-style-type: none"> • Battery • IC regulator • Power source circuit

Fail safe function:

If trouble occurs in the power source circuit, the ECU cuts off current to the ABS solenoid relay and prohibits ABS control and the brake system becomes normal.

WIRING DIAGRAM

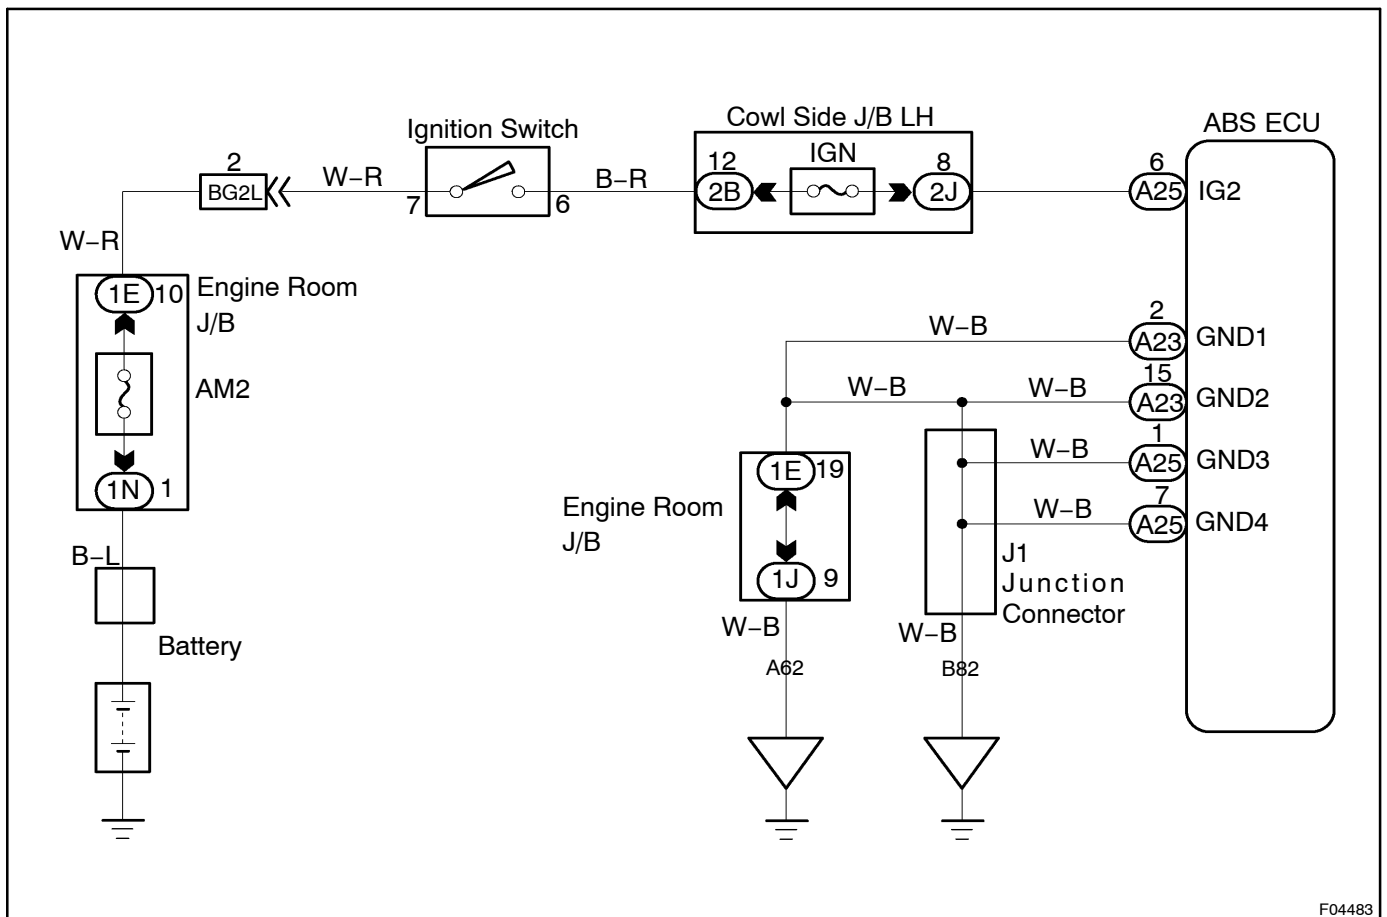

F04483

INSPECTION PROCEDURE

1	Check battery positive voltage.
---	---------------------------------

OK:

Voltage: 10 – 14 V

NG

Check and repair the charging system.

OK

2	Check voltage of the ECU IG2 power source.
---	--

IN CASE OF USING LEXUS HAND-HELD TESTER:**PREPARATION:**


- (a) Connect the LEXUS hand-held tester to the DLC3.
- (b) Turn the ignition switch ON and push the LEXUS hand-held tester main switch ON.
- (c) Select the DATALIST mode on the LEXUS hand-held tester.

CHECK:

Check the voltage condition output from the ECU displayed on the LEXUS hand-held tester.

OK:

"Normal" is displayed.

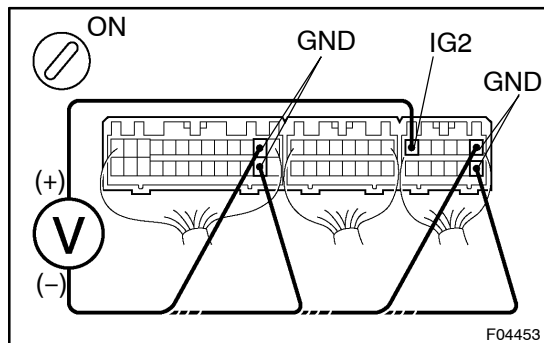IN CASE OF NOT USING LEXUS HAND-HELD TESTER:**PREPARATION:**

Remove ABS ECU with connectors still connected.

CHECK:

- (a) Turn the ignition switch ON.
- (b) Measure voltage between terminals IG2 and GND of ABS ECU connector.

OK:


Voltage: 10 – 14 V

OK

Ignition switch OFF, check and replace ABS ECU.

NG

3 Check continuity between terminal GND of ABS ECU connector and body ground.

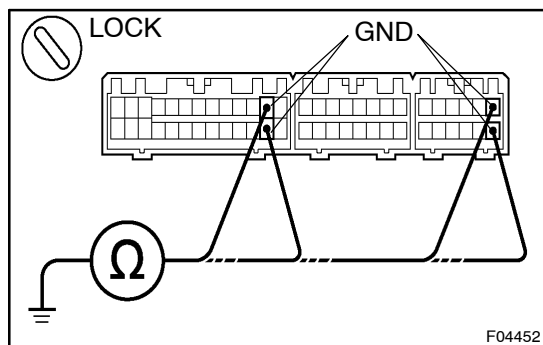

CHECK:

Measure resistance between terminal GND of ABS ECU connector and body ground.

OK:


Resistance: 1 Ω or less

NG

Repair or replace harness or connector.

OK

4 Check IGN fuse.

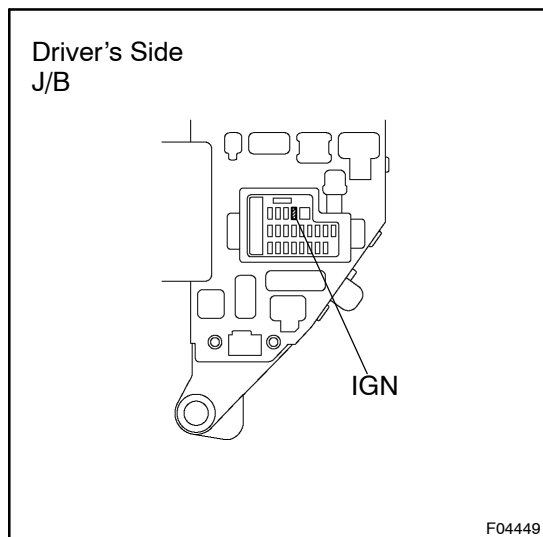

PREPARATION:

Remove IGN fuse from driver's side J/B.

CHECK:

Check continuity of IGN fuse.

OK:

Continuity

NG

Check for short circuit in all the harness and components connected to IGN fuse (See attached wiring diagram).

OK

Check for open circuit in harness and connector between ABS ECU and battery (See page [IN-33](#)).