

DTC	P0773	Shift Solenoid E Electrical Malfunction (Shift Solenoid Valve SL)
------------	--------------	--

CIRCUIT DESCRIPTION


The shift solenoid valve SL is turned ON and OFF by signals from the ECM to control the hydraulic pressure acting on the lock-up relay valve, which then controls operation of the lock-up clutch.

DTC No.	DTC Detecting Condition	Trouble Area
P0773	<p>Either a) or b) is detected 1 time. (2-trip detection logic)</p> <p>(a) Solenoid resistance is $8\ \Omega$ or less (short circuit) when the solenoid is energized.</p> <p>(b) Solenoid resistance is $100\ \text{k}\Omega$ or more (open circuit) when the solenoid is not energized.</p>	<ul style="list-style-type: none"> • Open or short in shift solenoid valve SL circuit • Shift solenoid valve SL • ECM

Fail safe function

If the ECM detects a malfunction, it turns the shift solenoid valve SL OFF.


WIRING DIAGRAM

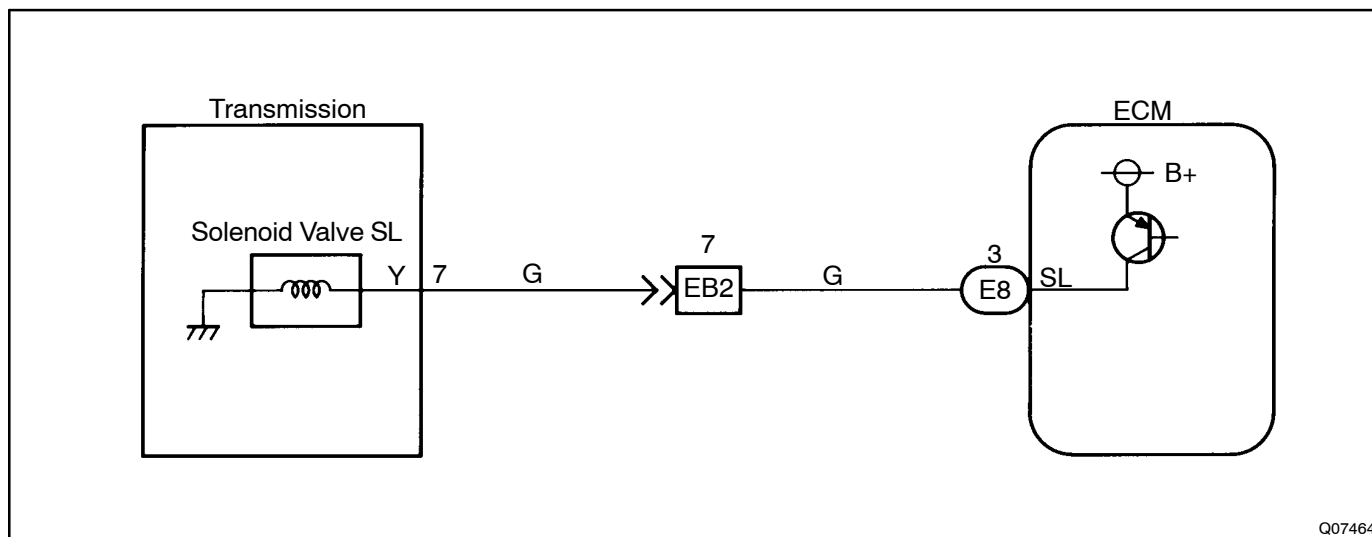

Q07464

INSPECTION PROCEDURE

1 Measure resistance between terminal SL of ECM and body ground.

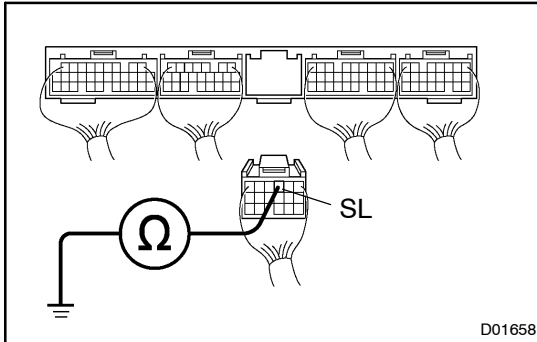

PREPARATION:

Disconnect the connector from ECM.

CHECK:

Measure resistance between terminal SL of ECM and body ground.

OK:


Resistance: 11 ~ 15 Ω at 20 °C

OK

Check and replace the ECM
(See page [IN-33](#))

NG

2 Check harness and connector between ECM and automatic transmission solenoid connector.

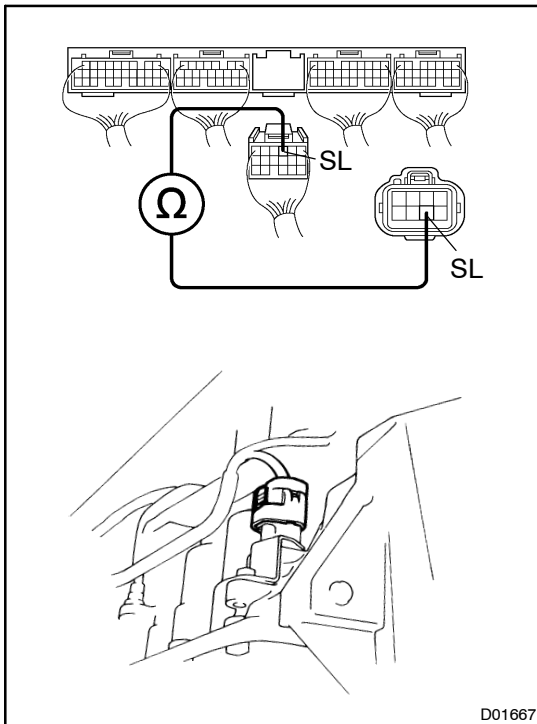

PREPARATION:

Disconnect the solenoid connector from the transmission.

CHECK:

Check the harness between terminal SL of ECM and terminal SL of transmission solenoid connector.

OK:


There is no open or short circuit.

NG

Repair or replace the harness or connector.

OK

3 Check shift solenoid valve SL.

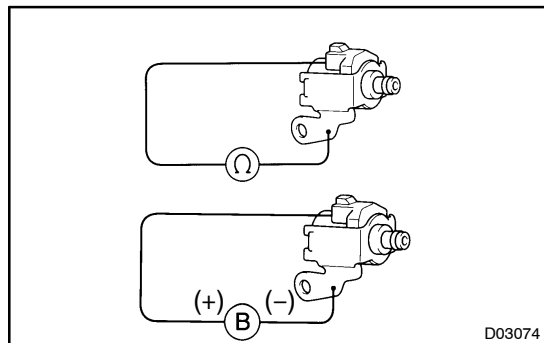**PREPARATION:**

- (a) Remove the oil pan.
- (b) Remove the shift solenoid valve SL.

CHECK:

- (a) Measure resistance between terminal SL of shift solenoid valve and solenoid body.
- (b) Connect positive \oplus lead to terminal of solenoid connector, negative \ominus lead to solenoid body.

OK:

- (a) **Resistance: 11 ~ 15 Ω**
- (b) **The shift solenoid valve SL makes operation noise.**

NG**Replace the shift solenoid valve SL.****OK****Repair or replace the solenoid wire.**