


# REAR WIPER AND WASHER

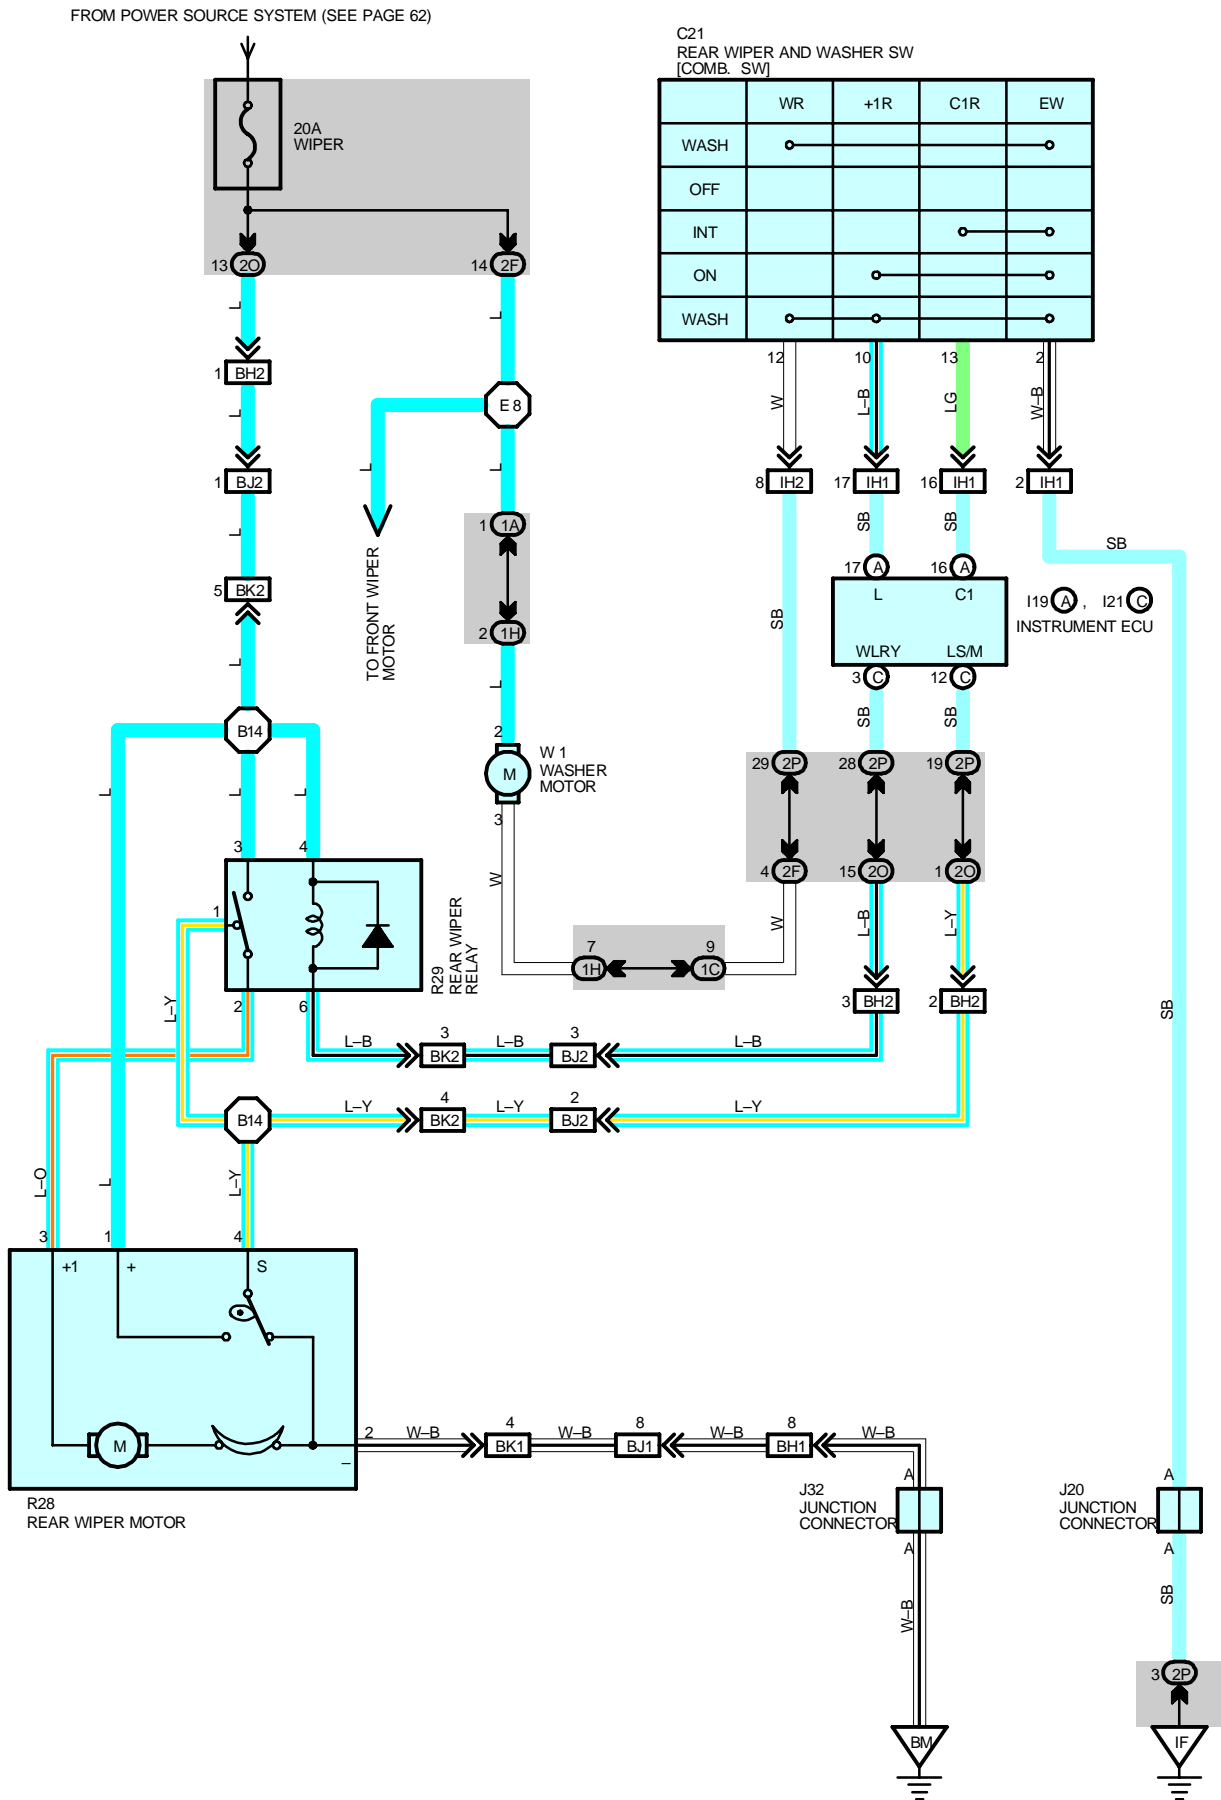

## SYSTEM OUTLINE

When the ignition SW is turned on, the current flows from WIPER fuse to washer motor TERMINAL 2, rear wiper relay TERMINAL 3 and TERMINAL 4 , and rear wiper motor TERMINAL 1 respectively.

### 1. REAR WIPER NORMAL OPERATION

When the ignition SW is turned on, and the rear wiper and washer SW is turned to ON position, the current flows from rear wiper relay (Coil side) to instrument ECU TERMINAL (C) 3 to TERMINAL (A) 17 to rear wiper and washer SW TERMINAL 10 to TERMINAL 2 to GROUND, and turns on the rear wiper relay. As a result, the current flows from rear wiper relay TERMINAL 3 to TERMINAL 2 to rear wiper motor TERMINAL 3 to TERMINAL 2 to GROUND, and operates the rear wiper.

### 2. REAR WIPER INTERMITTENT OPERATION

When the ignition SW is turned on, and the rear wiper and washer SW is turned to INT position, the current flows from rear wiper relay (Coil side) to instrument ECU TERMINAL (C) 3 to TERMINAL (A) 16 to rear wiper and washer SW TERMINAL 13 to TERMINAL 2 to GROUND, and the intermittent circuit in the instrument ECU is controlled to operate the wiper intermittently.

### 3. WASHER OPERATION

When the ignition SW is turned on, and the rear wiper and washer SW is turned from OFF to WASH position, the current flows from the WIPER fuse to washer motor TERMINAL 2 to TERMINAL 3 to rear wiper and washer SW TERMINAL 12 to TERMINAL 2 to GROUND. This activates the washer motor, and the window washer emits a water spray. When the rear wiper and washer SW is turned to ON position, the window washer emits a water spray during rear wiper normal operation.

## SERVICE HINTS

### W1 WASHER MOTOR

2-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position

3-GROUND : Continuity with rear wiper and washer SW at **WASH** position

### R28 REAR WIPER MOTOR

1-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position

2-GROUND : Always continuity

## : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C21	38	J20	39	R29	41
I19	A 38	J32	40	W1	37
I21	C 38	R28	41		

## : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	21	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1C		
1H	21	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2F	24	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2O	24	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	26	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)

## : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH1	48	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
IH2		
BH1	54	Luggage Room Wire and Floor Wire (Left Rear Side Quarter Panel)
BH2		
BJ1	56	Pillar No.1 Wire and Luggage Room Wire (Left Rear Side Roof Panel)
BJ2		
BK1	56	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BK2		

# REAR WIPER AND WASHER



: GROUND POINTS


Code	See Page	Ground Points Location
IF	46	Set Bolt of Cowl Side J/B LH
BM	54	Left Rear Side Quarter Panel




: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E8	44	Engine Room No.2 Wire	B14	56	Back Door Upper Wire


C21  
BLACK

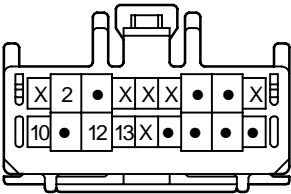


I19 (A)

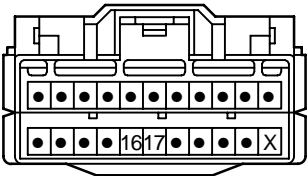

I21 (C)  
BLUE

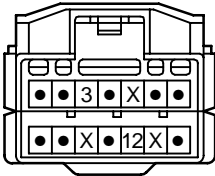


J20  
GRAY

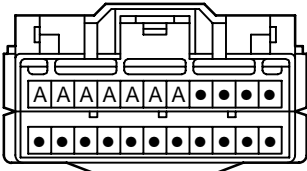


(Hint : See Page 7)

J32




(Hint : See Page 7)

R28



R29  
BLACK

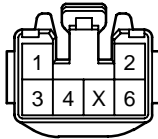

W1  
GRAY

