


REMOVAL

1. REMOVE FRONT HEIGHT CONTROL SENSOR

- (a) Remove the front wheel.
Torque: 131 N·m (1,340 kgf·cm, 97 ft·lbf)
- (b) Disconnect the connector.

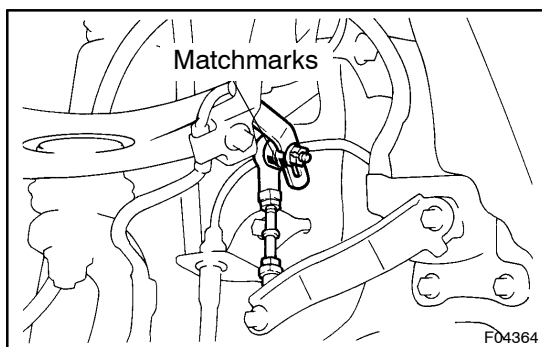

- (c) Remove the front height control sensor.
 - (1) Place matchmarks on the height control sensor link and front upper suspension arm.
 - (2) Remove the nut and disconnect the height control sensor link.


Torque: 5.6 N·m (57 kgf·cm, 49 in·lbf)

- (3) Remove the 2 bolts and height control sensor.

Torque: 28 N·m (285 kgf·cm, 21 ft·lbf)

2. REMOVE REAR HEIGHT CONTROL SENSOR

- (a) Remove the rear wheel.
Torque: 131 N·m (1,340 kgf·cm, 97 ft·lbf)
- (b) Disconnect the connector.

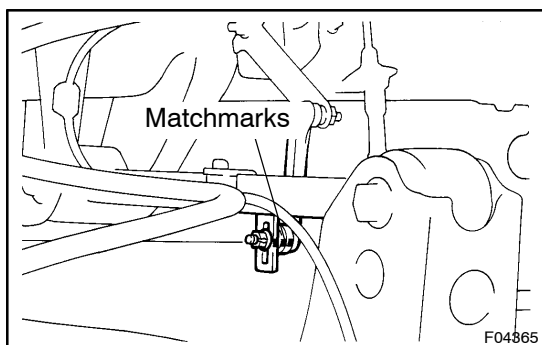

- (c) Remove the rear height control sensor.
 - (1) Place matchmarks on the height control sensor link and rear upper control arm.
 - (2) Remove the nut and disconnect the height control sensor link from the rear upper control arm.

Torque: 5.6 N·m (57 kgf·cm, 49 in·lbf)

- (3) Remove the 2 bolts and height control sensor.

Torque: 28 N·m (285 kgf·cm, 21 ft·lbf)