


INSPECTION

1. INSPECT FOG LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	-	No continuity
ON	10 - 11	Continuity

If continuity is not as specified, replace the switch.

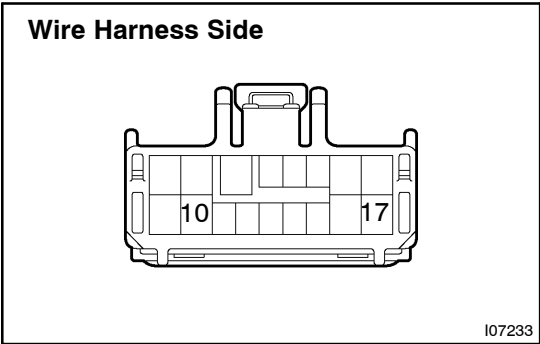


2. INSPECT FOG LIGHT SWITCH CIRCUIT

Connector disconnected:

Disconnect the connector from the switch and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
10 - 17	Constant	Continuity

If circuit is not as specified, inspect the wire harness.

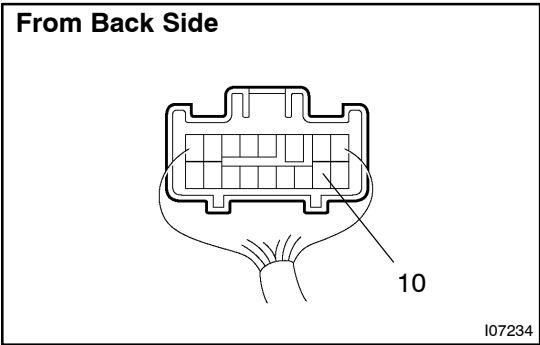

3. INSPECT FOG LIGHT SWITCH CIRCUIT


Connector connected:

Connect the wire harness side connector to the light control and dimmer switch and inspect the connector from the back side, as shown.

## BODY ELECTRICAL – FOG LIGHT SYSTEM

Tester connection	Condition	Specified condition
10 – Ground	Light control switch HEAD and headlight dimmer switch LO and fog light switch ON	No voltage
10 – Ground	Light control switch HEAD and headlight dimmer switch HI or FLASH and fog light switch ON	Battery positive voltage

If circuit is not as specified, inspect the wire harness.

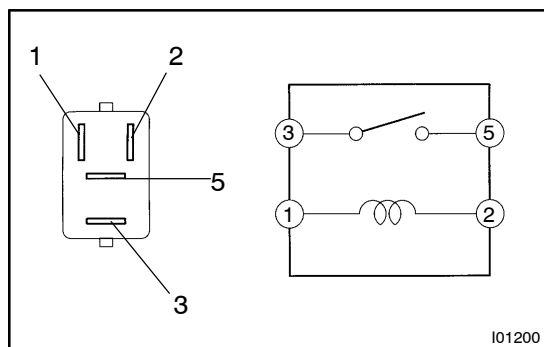**4. INSPECT FOG LIGHT RELAY CONTINUITY**

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the relay.

**5. INSPECT FOG LIGHT RELAY CIRCUIT(See page [BE-17](#))**