


INSPECTION

1. INSPECT STOP LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Switch pin free (Pedal depressed)	1 – 2	Continuity
Switch pin pushed in (Pedal released)	–	No continuity
Switch pin free (Pedal depressed)	–	No continuity
Switch pin pushed in (Pedal released)	3 – 4	Continuity

If continuity is not as specified, replace the switch.

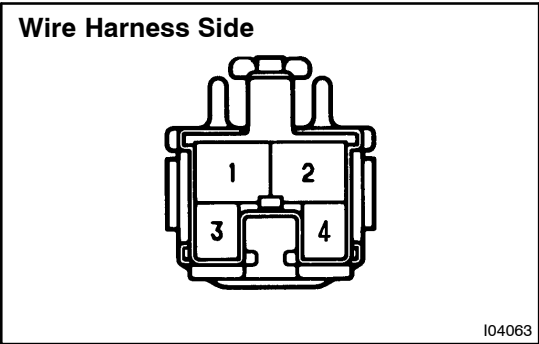


2. INSPECT STOP LIGHT SWITCH CIRCUIT

Disconnect the connector from the switch and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
2 – Ground	Constant	Battery positive voltage


If circuit is not as specified, inspect the power source or wire harness.

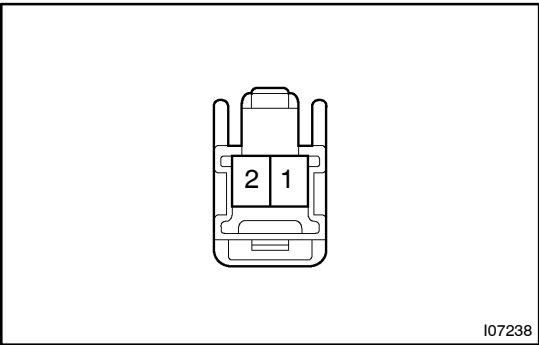

3. INSPECT HI-MOUNTED STOP LIGHT CONTINUITY

Using an ohmmeter, check that continuity exists between terminals.

If continuity is not as specified, replace the light assembly.

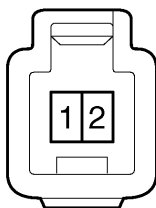Wire Harness Side

I07239

4. INSPECT HI-MOUNTED STOP LIGHT CIRCUIT

Disconnect the connector from the light and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
1 – Ground	Constant	Continuity

If circuit is not as specified, inspect the power source or wire harness.