

## REAR COOLING UNIT ON-VEHICLE INSPECTION

AC1KA-03

### 1. INSPECT EXPANSION VALVE


- (a) Check quantity of gas during refrigeration cycle.
- (b) Set on manifold gauge set.
- (c) Start engine.
- (d) Operate the A/C system.
- (e) Inspect the expansion valve.
  - (1) Run engine at 1,500 rpm for a least 5 minutes.
  - (2) Check the high pressure reading is 1.37 – 1.57 MPa (14 – 16 kgf/cm<sup>2</sup>, 199 – 288 psi).
  - (3) Check the low pressure reading.

If the low pressure reading is 0 kPa (0 kgf/cm<sup>2</sup>, 0psi), replace the expansion valve.

### 2. REMOVE REAR DOOR SCUFF PLATE RH

### 3. REMOVE REAR FLOOR MAT SUPPORT PLATE

### 4. REMOVE QUARTER TRIM PANEL RH

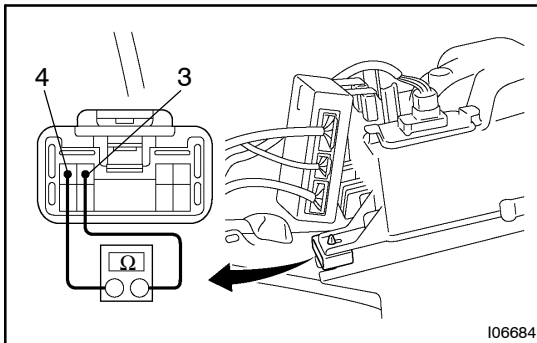


I06684

### 5. INSPECT THERMISTOR RESISTANCE

- (a) Disconnect the connector.
- (b) Measure resistance between terminals 3 and 4.

**Standard resistance: Approx. 1.5 kΩ at 25 °C (77 °F)**


If resistance is not as specified, proceed "INSPECTION" on page [AC-36](#).

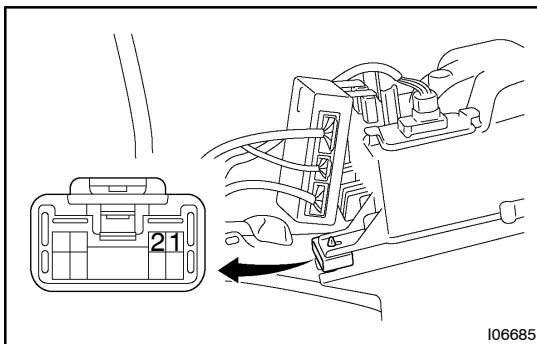

I06685

### 6. INSPECT MAGNETIC VALVE CONTINUITY

- (a) Disconnect the connector.
  - (b) Check the continuity exists between terminals 1 and 2.
- If resistance is not as specified, proceed "INSPECTION" on page [AC-36](#).

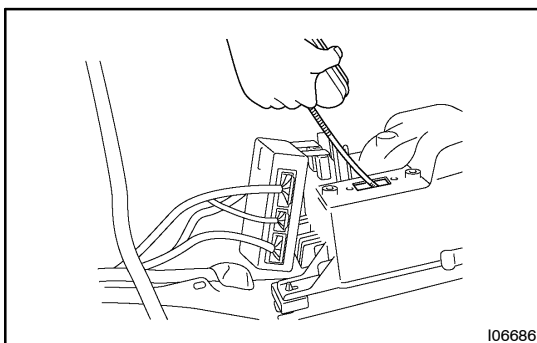

I06686

### 7. CHECK FOR LEAKAGE OF REFRIGERANT

- (a) Remove the power transistor.
- (b) Using a gas leak detector, check for leakage of refrigerant.

If there is leakage, check the evaporator or tightening torque at the joints.