


Blower Motor Circuit

CIRCUIT DESCRIPTION

This is the power source for the blower motor.


WIRING DIAGRAM

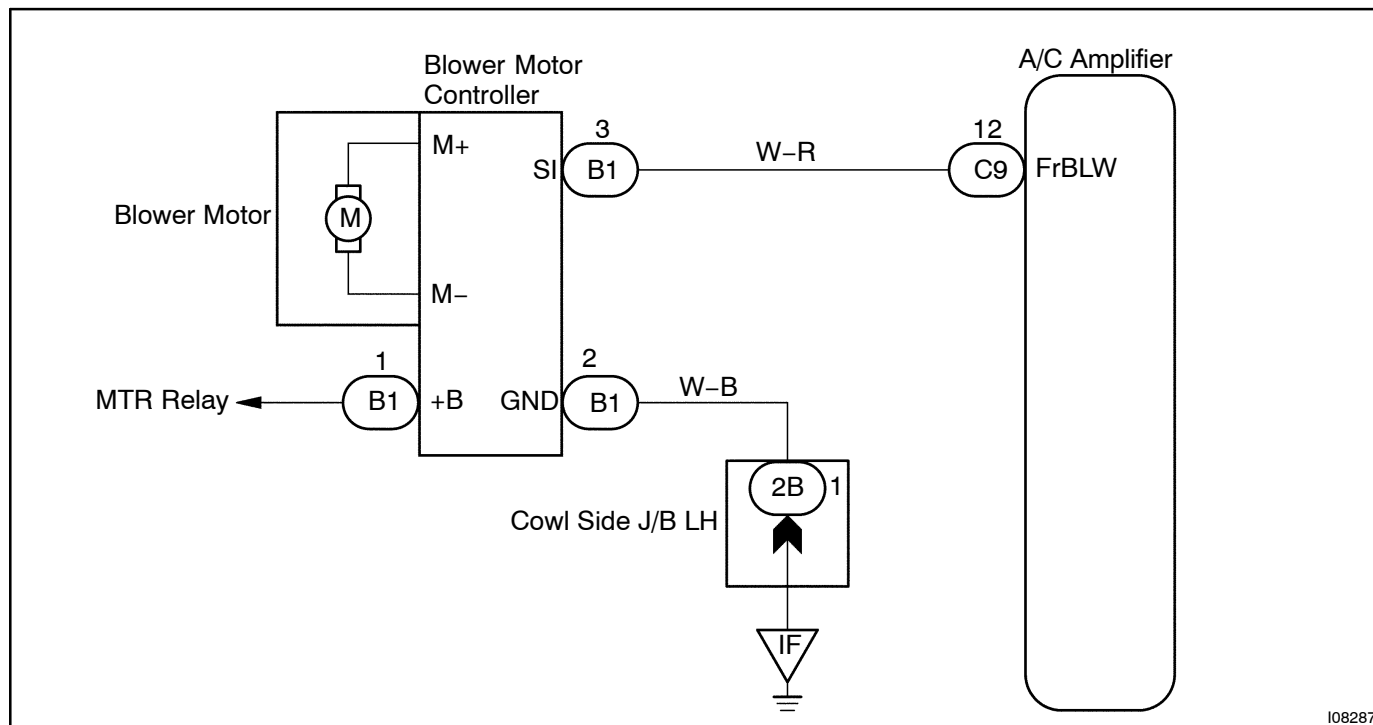

I08287

INSPECTION PROCEDURE

- | | |
|----------|---|
| 1 | Check voltage between terminal BLW of A/C amplifier connector and body ground. |
|----------|---|

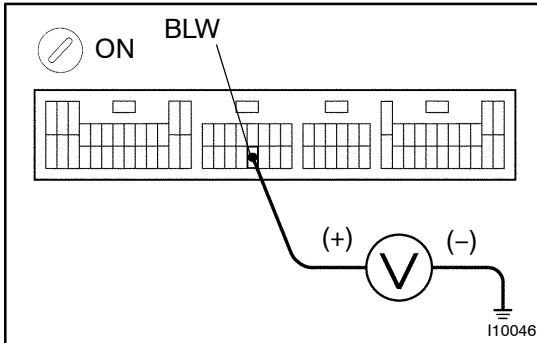**PREPARATION:**

Remove the A/C amplifier with connector still connected.

CHECK:

- (a) Turn ignition switch to ON.
- (b) Operate blower motor.
- (c) Measure voltage between terminal BLW of A/C amplifier and body ground.

OK:


Voltage : 1 – 3 V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-777](#)).

NG

- | | |
|----------|----------------------------|
| 2 | Check blower motor. |
|----------|----------------------------|

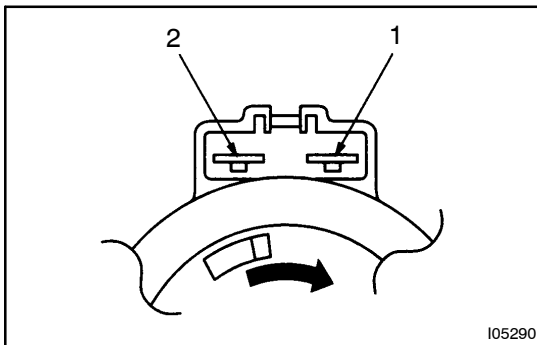**PREPARATION:**

Remove blower motor (See page [AC-80](#))

CHECK:

Connect the positive (+) lead from the battery to terminal 2 of blower motor connector and the negative (-) lead to terminal 1.

OK:

Blower motor operates smoothly.


NG

Replace blower motor.

OK

3

Check blower motor control relay.

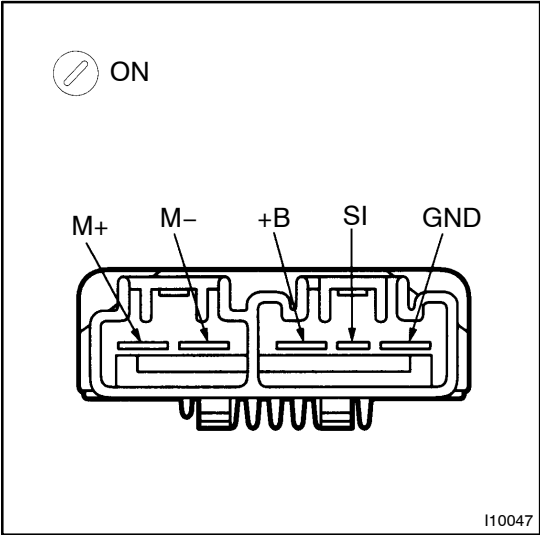

PREPARATION:

Remove blower motor control relay with connectors still connected.

CHECK:

- (a) Turn ignition switch to ON.
- (b) Operate blower motor (High blower speed).

OK:

Terminals	Standard Value
GND ↔ Body Ground	Continuity
+B ↔ Body Ground	Battery Positive Voltage
+M ↔ Body Ground	Battery Positive Voltage
M+ ↔ M-	Battery Positive Voltage
SI ↔ Body Ground	1 – 3 V

NG

Replace blower motor relay.

OK

Repair or replace harness or connector.